
 


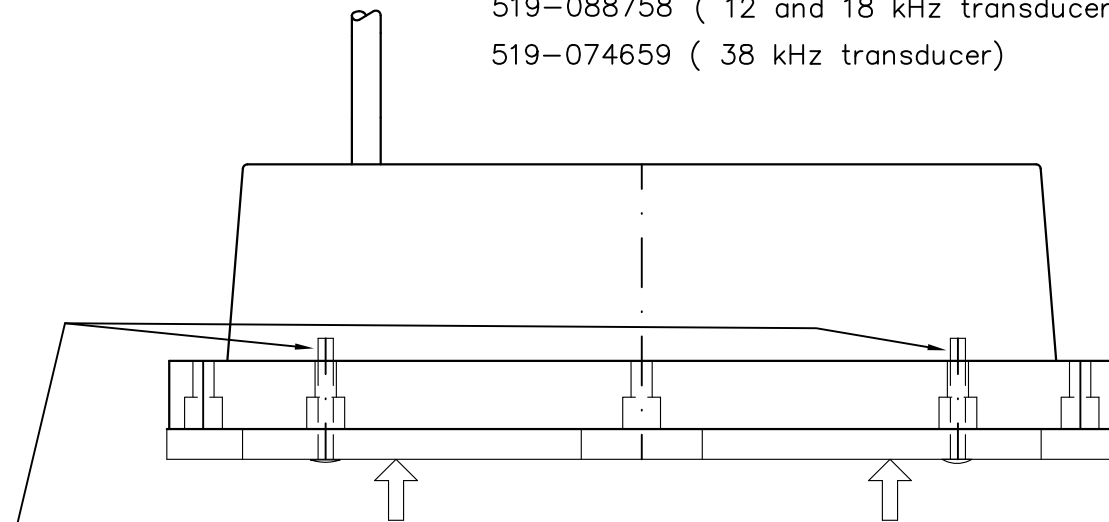

Protecting plate.
 519-088758 (12 and 18 kHz transducer)
 519-074659 (38 kHz transducer)



- Remove nuts and washers before mounting the transducer in the steel blister.
- Jack up the transducer into the steel blister. Fasten the transducer with 4 mounting screws.
- Remove the protecting plate.

REV./SIGN.										
DATE										
PROJ. METHOD			UNLESS OTHERWISE STATED, TOLERANCE: DIM.: ---- THREAD: 6g/6H							
SCALE	1:5		Mounting procedure				SHEET 1 OF 1			
DRAWN	92.01.07	TW	12 , 18 and 38 kHz transducer				820-088759		B	
CHECKED	92.02.17	B.G	in steel blister							
APPROVED	92.02.17	H.K					FILE NO.: 586-2			