

Installation manual

Simrad ES38B

38 kHz split-beam transducer



Simrad ES38B

Installation manual

This document provides a general description of how to install the Simrad ES38B Split-beam transducer. The information must be regarded as general guidelines and recommendations only. The installation shipyard must design and manufacture installation hardware to fit the ES38B transducer on each individual vessel.

Document history

Simrad document number: 338462 / ISBN-13: 978-82-8066-107-4 / Current revision: B		
Rev.A	18.09 2009	First version. Replaces old installation manual (130003).
Rev.B	16.11.2009	Support bar description changed, must be installed. Added drawing <i>Support bar [206574]</i> on page 39.

Copyright

©2009 Kongsberg Maritime AS

The information contained in this document remains the sole property of Kongsberg Maritime AS. No part of this document may be copied or reproduced in any form or by any means, and the information contained within it is not to be communicated to a third party, without the prior written consent of Kongsberg Maritime AS. The document, or any part of it, may not be translated to any other language without the written approval from Kongsberg Maritime AS.

Disclaimer

Kongsberg Maritime AS endeavours to ensure that all information in this document is correct and fairly stated, but does not accept liability for any errors or omissions.

Warning

The equipment to which this manual applies must only be used for the purpose for which it was designed. Improper use or maintenance may cause damage to the equipment and/or injury to personnel. The user must be familiar with the contents of the appropriate manuals before attempting to install, operate or work on the equipment.

Kongsberg Maritime AS disclaims any responsibility for damage or injury caused by improper installation, use or maintenance of the equipment.

Support

If you require maintenance or repair, contact your local dealer. You can also contact us using the following address: contact@simrad.com. If you need information about our other products, visit our web site. On the web site you will also find a list of our dealers and distributors.

Simrad

Kongsberg Maritime AS
Strandpromenaden 50
P.O.Box 111
N-3191 Horten, Norway

Telephone: +47 33 03 40 00
Telefax: +47 33 04 29 87
www.simrad.com
contact@simrad.com

The logo for SIMRAD, consisting of the word "SIMRAD" in a bold, red, sans-serif font.

Table of contents

ABOUT THIS MANUAL	5
SIMRAD ES38B	6
WHERE TO MOUNT THE TRANSDUCER.....	7
HOW TO INSTALL THE TRANSDUCER	11
Transducer installation in blister	11
Use the mounting ring.....	11
Smooth surface is important	11
Use a horizontal support bar on large transducers.....	11
Example: Large circular transducer.....	12
Common guidelines	12
Toe-in	13
Physical location.....	13
Transducer installation in box keel.....	14
Use the mounting ring.....	14
Smooth surface is important	14
Use a horizontal support bar on large transducers.....	15
Example: Box keel installation	15
Transducer flush mounted in a steel tank	15
Use the mounting ring.....	16
Smooth surface is important	16
Use a horizontal support bar on large transducers.....	16
Water filled.....	16
Example: Flush mounting in a steel tank	17
Transducer with acoustic window	17
Use the mounting ring.....	17
Smooth surface is important	17
Example: Acoustic window.....	18
Transducer mounted inside the hull	18
Use the mounting ring.....	19
Smooth surface is important	19
Example: Mounting inside the hull	19
Transducer mounted on a drop keel	20
Retractable transducer	21
STEEL CONDUIT	22
TRANSDUCER HANDLING AND MAINTENANCE	23
Rules for transducer handling.....	23
Approved anti-fouling paints.....	24
Using self-locking taps.....	24

Introduction to Emuge self-locking threads.....	25
Drawing standard.....	26
Taps and gauges.....	26
Self-lock taps provided by Simrad	27
Supplier and manufacturer.....	27
TRANSDUCER CABLE SPLICING.....	28
DRAWING FILE	29
Echo sounder connections	29
Splicing the transducer cable	29
General Purpose Transceiver (GPT) wiring.....	30
General Purpose Transceiver (GPT) transducer plug assembly.....	31
Outline dimensions and installation drawings.....	32
Outline dimensions [074647].....	33
Mounting ring [074076]	34
Recommended arrangement [074544]	36
Mounting procedure [088759]	38
Support bar [206574]	39

ABOUT THIS MANUAL

Purpose

The purpose of this installation manual is to provide the generic descriptions and illustrations that allows you to understand the basic principles for echo sounder transducer installation.

About the information provided in this document

The information in this document must be regarded as general guidelines and recommendations only. The installation shipyard must design and manufacture installation hardware to fit each individual transducer and vessel.

Approval by maritime authorities

Whenever required, the installation shipyard must also have the installation approved by the applicable maritime authorities.

Additional information

For additional detailed information about the transducer to be installed, refer to the documentation provided with the transducer. Drawings and descriptions can also be obtained from <http://www.simrad.com>.

SIMRAD ES38B

The purpose of this manual is to provide the basic information required to install the Simrad ES38B Split-beam transducer.

Transducer and documents

- Simrad ES38B: **KSV-074531**
- Data sheet: **164247**
- Drawings:
 - Outline dimensions: **830-074647**
 - Mounting ring: **499-074076**
 - Steel blister: **111-082733**
 - Mounting procedure: **820-088759**
 - Mounting arrangement: **820-074544**

Note

Although drawings are provided to explain the installation principles, the installation shipyard must provide the final drawings required to fit the transducer to each individual vessel. Also, when applicable, the installation shipyard must have the drawings and installation approved by the proper maritime authorities. The drawings specific for the ES38B transducer are located in the Drawing file on page 29.

Technical specifications

Refer to the Simrad ES38B data sheet. You can read and/or download the data sheet on <http://www.simrad.com>.

Additional parts provided for installation

The following items can be supplied by Simrad to facilitate installation. The items must be ordered separately.

- Mounting ring: **499-074076**
- Support beam: **099-206575**
- Steel tank: **599-133807**
- Arctic tank: **KSV-065087**
- Transducer cable (for extension): **642-075072**

WHERE TO MOUNT THE TRANSDUCER

A single answer to the question where to locate the transducer cannot be given. It depends very much on the vessel's construction, how the hull is shaped and how the water runs along the hull. There are however a number of important guide lines, and some of these are even conflicting.

Mount the transducer deep

Mount the transducer at a deep position on the hull. Consider the situations when the vessel is unloaded, and when it is pitching in heavy seas.

There are several reasons for this.

- 1 The upper water layers of the sea contain a myriad of small air bubbles created by the breaking waves. In heavy seas the upper 5 to 10 metres may be filled with air, and the highest concentrations will be near the surface. Air bubbles absorb and reflect the sound energy, and they may in worst cases block the sound transmission altogether.
- 2 Another reason to go deep is the cavitation in front of high power transducers. Cavitation is the formation of small bubbles in the water due to the resulting local pressure becoming negative during parts of the acoustic pressure cycles. The cavitation threshold increases with the hydrostatic pressure.
- 3 The transducer must never be lifted free of the water surface. Transmitting into open air may damage the transducer beyond repair. Mounting the transducer at a deep position on the hull prevents this.
- 4 If the transducer is lifted up from the water during heavy seas, it may be damaged when the hull strikes back at the sea surface. This is especially important for low frequency transducers with large faces.


Mount the transducer away from protruding objects on the hull

Objects protruding from the hull, such as zinc anodes, sonar transducers or even the vessel's keel, generate turbulence and flow noise. Holes and pipe outlets are also important noise sources. They may act as resonant cavities amplifying the flow noise at certain frequencies. Do not place an echo sounder transducer in the vicinity of such objects, and especially not close behind them. For the same reason, it is very important that the hull area around the transducer face is as smooth and level as possible. Even traces of sealing compound, sharp edges, protruding bolts or bolt holes without filling compound will create noise.

Mount the transducer at the forward part of the hull to minimise the effects from the boundary water layer

When the vessel forces its way through the sea, the friction between the hull and the water creates a boundary layer. The thickness of the boundary layer depends upon vessel speed and the roughness of the hull. Objects protruding from the hull, and dents in the hull, disturb the flow and increase the thickness of the boundary layer. The flow in this boundary layer may be laminar or turbulent. A laminar flow is a nicely ordered, parallel movement of the water. A turbulent flow has a disorderly pattern, full of eddies. The boundary layer increases in thickness when the flow goes from laminar to turbulent. The figure below illustrates the boundary layer of a vessel moving through the water.

Figure 1 Boundary water layer

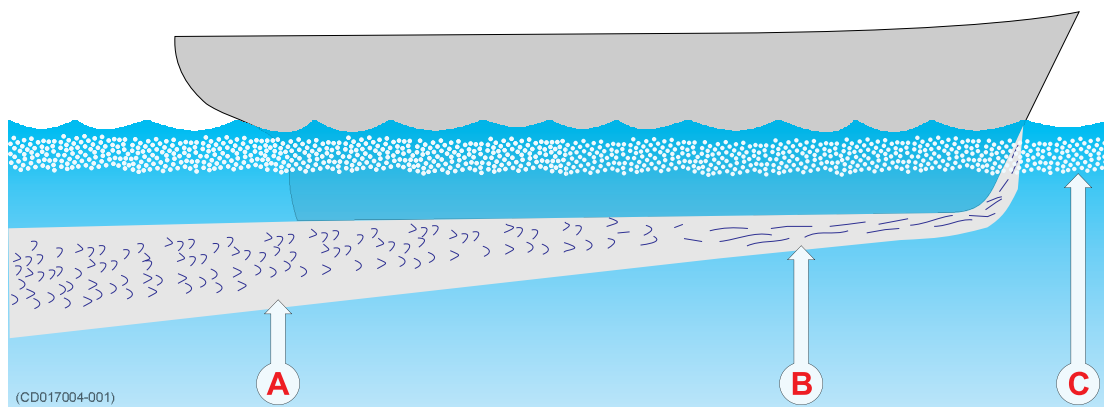

- A *Turbulent flow*
- B *Laminar flow*
- C *Air bubbles in the water*

Furthermore, air bubbles in the sea water are pressed down below the hull and mixed into the boundary layer. The boundary layer is thin underneath the forward part of the vessel, and increases in thickness as it moves towards aft. If the sides of the hull are steep, some of the air bubbles in the boundary layer may escape to the sea surface along the vessel sides. It is our experience that a wide and flat bottom, with a rising angle less than around 13 degrees, is prone to giving air problems for the transducer. In any case a transducer location in the forward part of the hull is preferred in order to minimise the influence of the boundary layer.

Mount the transducer far away from the propellers

The propulsion propeller is the dominant noise source on most fishing vessels, research vessels, merchant vessels and pleasure crafts. The noise is transmitted through the sea water. For this reason, the transducer should be placed far away from the propeller, which means on the fore part of the hull. Positions outside the direct line of sight from the propeller are favourable. On small vessels with short distances it is advised to mount the transducer on that side of the keel where the propeller blades move upwards, because the propeller cavitation is strongest on the other side. The cavitation starts most easily when the water flows in the same direction as the propeller blade, and that is to some degree the case at that side of the keel where the propeller blades move downwards.

Mount the transducer far away from the bow thrusters

Bow thruster propellers are extremely noisy. When in operation, the noise and cavitation bubbles created by the thruster make the echo sounder useless, almost no matter where the transducer is installed. And when not in operation, the tunnel creates turbulence, and if the vessel is pitching, the tunnel may be filled with air or aerated water in the upper position and release this in the lower position. In general, all transducers must be therefore placed well away from the bow thruster. However, this is not an invariable rule. Certain thruster designs combined with its physical location on the hull may still offer suitable transducer locations near the thruster. If you are in doubt, consult a naval architect.


Mount the transducer with a slightly inclined transducer face

Ideally, the transducer face should be mounted in parallel with the sea surface when the vessel is in normal trim, as this will provide the most accurate echo information. However, it is also very important that the water flow over the transducer face is laminar. In order to ensure laminar flow, the transducer face may be tilted slightly upwards in relation to the water flow. This allows the flowing water to meet the face directly, and assures laminar flow. The inclination angle must however be determined carefully. The angle must be small on transducers with narrow beam angles. As a rule of thumb, mount transducers with beam angles smaller than seven degrees with minimum inclination angle. The smaller beam angle your transducer has, the smaller the inclination angle can be. Ensure that you do not mount the transducer with a negative inclination angle. This may cause turbulence under the transducer face, and reduced echo sounder performance.

Summary and general recommendations

Some of the above guide lines are conflicting, and each case has to be treated individually in order to find the best compromise. Generally the propeller noise is the dominant factor, and a recommended transducer location is in the fore part of the hull, with maximum distance from the bow equal to one third of the total length of the hull at the water line.


Figure 2 General recommendation for transducer location

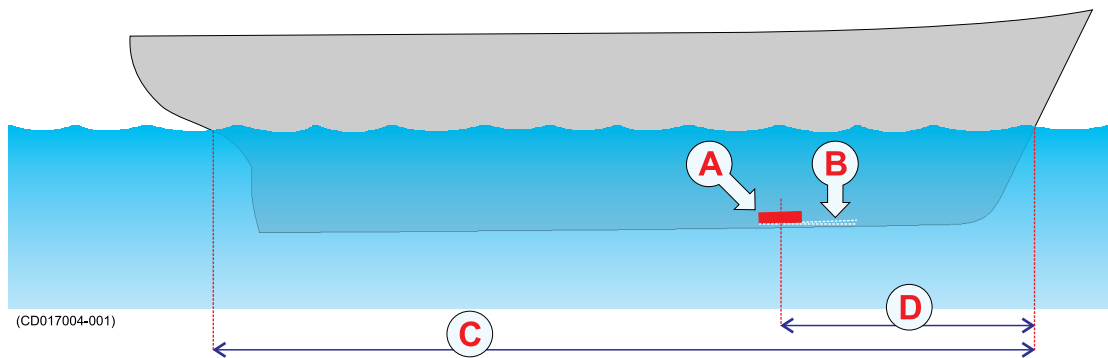

- A *Transducer*
- B *Inclination angle*
- C *Hull length at water line*
- D *Maximum 1/3 of the hull length at water line (C)*

If the vessel hull has a bulbous bow, this may well be a good transducer location, but also here must be taken into consideration the flow pattern of the aerated water. Often the foremost part of the bulb is preferable.

Figure 3 Recommended location of the transducer on a bulbous hull

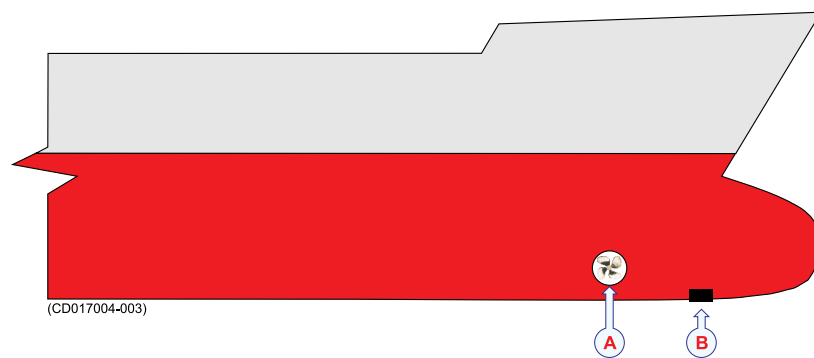

- A *Thruster*
- B *Transducer location*

HOW TO INSTALL THE TRANSDUCER

There are many different ways to mount the transducer. These are the recommended methods to mount a streamlined and circular transducers under the hull or in a towed body.

Transducer installation in blister

With a transducer with circular housing, one recommended installation method is by using a blister. The transducer blister must be designed and manufactured by the installation shipyard to fit the vessel's size and hull shape.

Use the mounting ring

Large circular transducers are designed to be mounted using a mounting ring. A suitable mounting can be provided by Simrad, drawings are also available for local production. The mounting ring is welded to the hole prepared for the transducer. Bolts through the transducer body into the mounting ring will secure the transducer in place. Note that several transducers use direction guides to allow correct mounting.

Smooth surface is important

Mounting screws or bolts must not be extruding from the transducer or the area immediately around it. Make sure that the surface of the transducer face, the installation hardware used to mount it, the hull plating and the putty around the transducer is as even and smooth as possible. Obstructions on these surfaces will create problems with turbulent flow.

Use a horizontal support bar on large transducers


Due to its physical size, the ES38B transducer must be fitted with a horizontal support bar. The purpose of this support bar is to protect the transducer from damage in the event of slamming. This happens if the vessel hull climbs out of the water in heavy seas. The force of the water when the hull falls down may push the transducer up and cause damage to its mounting. The support bar can be secured to the mounting ring using threaded rods. See *Support bar [206574]* on page 39. ^[1]

-
1. Slamming is the impact of the bottom structure of a ship onto the sea surface. It is mainly observed while sailing in waves, when the bow raises from the water and subsequently impacts on it. Slamming induces extremely high loads to ship structures and is taken under consideration when designing ships. (Wikipedia)

Example: Large circular transducer

The illustration below shows a typical transducer blister designed for a large transducer. Note that due to the physical size of the transducer, a U-shaped support bar (E) is used to support the transducer. The purpose of this support is to prevent the transducer from being pushed up into the blister in heavy seas.

Figure 4 Large circular transducer

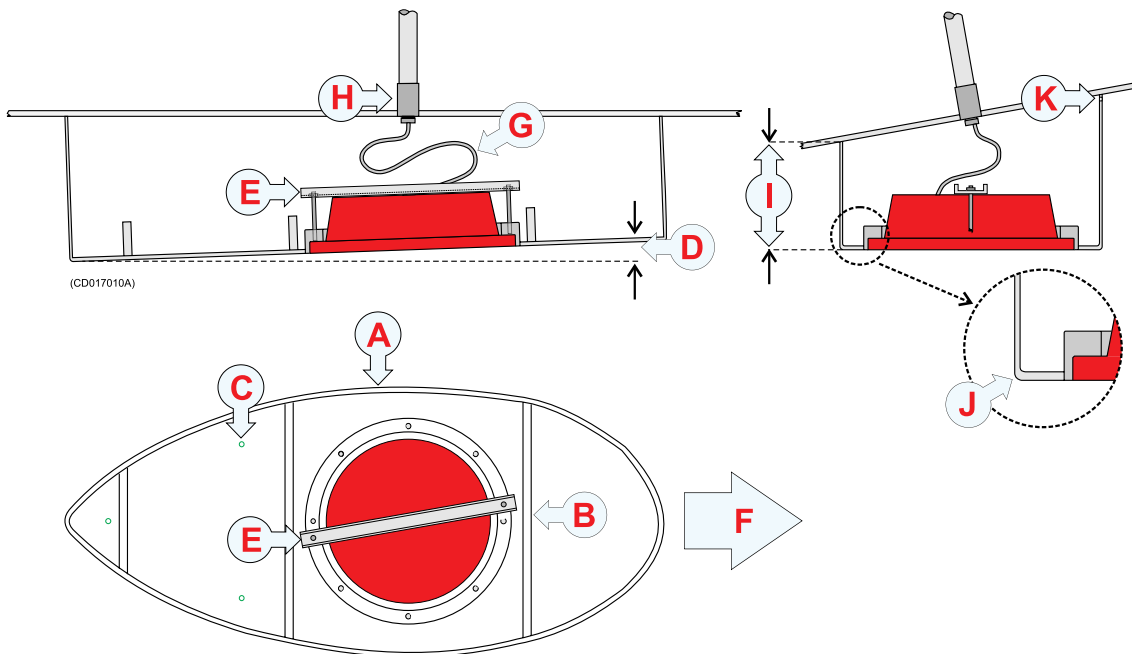

- | | |
|--|-----------------------------|
| A Streamlined blister | F Forward |
| B Stiffening rib | G Cable service loop |
| C Drainage holes | H Stuffing tube |
| D Inclination angle | I Minimum 400 mm |
| E U-shaped support bar (recommended on large transducers) | J Rounded corners |
| | K Air outlet |

Common guidelines

The best performance is obtained with a blister height of 40 cm or more. A streamlined shape and rounded edges reduce the flow noise. A vertical leading edge or front will guide the aerated water to the sides of the blister. The orientation of the blister should follow the water flow.

The interior of the blister must be filled with sea water. Use drainage holes in the bottom and an air outlet on the top. The water pressure behind the transducer will then compensate for the outside pressure during vessel movements in rough sea.


We recommend that large diameter transducers are fitted with a horizontal U-shaped support bar. This bar can then be secured to the mounting ring using threaded rods.

The transducer cable penetrates the hull in a stuffing tube. Leave an adequate loop of the cable behind the transducer for easy mounting or removal of the transducer.

Toe-in

The primary consideration must be to allow laminar water flow. In most cases this is achieved by designing the blister in parallel with the keel. However, if the blister is located close to the bow, the front of the blister may have a few degrees toe-in towards the bow.

Figure 5 Toe-in principle

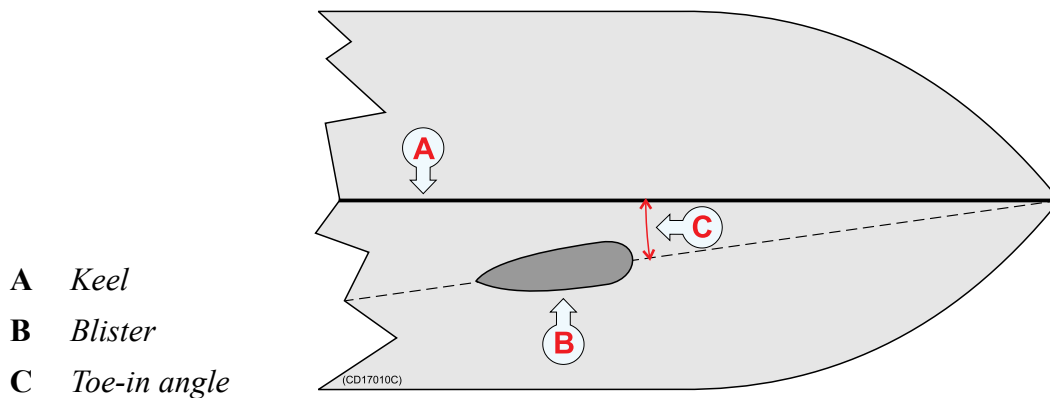


The angle must be chosen to allow for most efficient water flow. It will vary with the location of the transducer; the depth below the hull, the distance from the bow, and the distance to the keel. Typical angles are from 0 to 3° on displacement hulls. On planing hulls, the angle is normally close to 0°.

Physical location

The blister is placed on one of the sides of the hull, and the distance from the keel is a trade off between a close distance giving a turbulent flow of water in a narrow passage, and a large distance bringing the transducer higher up and also more affected by vessel roll. Normally a distance of approximately 1 m is a good compromise.

Observe the horizontal and vertical distances (C and D) between the keel and the transducer blister. On a medium sized vessel, the horizontal distance (C) should be approximately 1 meter. The vertical distance (D) must in general be as small as possible. This is important to prevent the keel from shadowing the transducer beam in shallow waters.

- A Keel
- B Transducer blister
- C Horizontal distance between keel and blister
- D Vertical distance between the blister surface and the keel

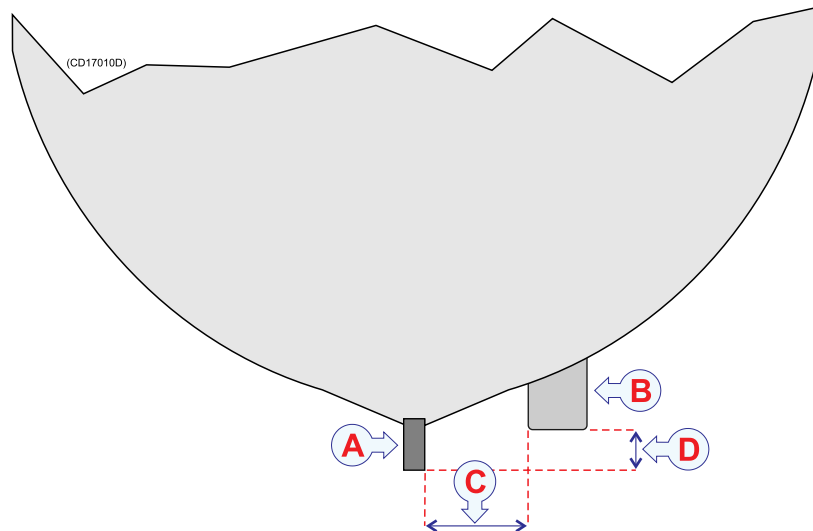

Transducer installation in box keel

Vessels with a box keel may use this for transducer installation.

The box keel is already the deepest part of the vessel. If the box keel is too narrow to accommodate the transducer, it can be widened, either symmetrically or to one side only. In the last case the installation could also be described as a blister merged into the keel.

Use the mounting ring

Large circular transducers are designed to be mounted using a mounting ring. A suitable mounting can be provided by Simrad, drawings are also available for local production. The mounting ring is welded to the hole prepared for the transducer. Bolts through the transducer body into the mounting ring will secure the transducer in place. Note that several transducers use direction guides to allow correct mounting.

Smooth surface is important

Mounting screws or bolts must not be extruding from the transducer or the area immediately around it. Make sure that the surface of the transducer face, the installation hardware used to

mount it, the hull plating and the putty around the transducer is as even and smooth as possible. Obstructions on these surfaces will create problems with turbulent flow.

Use a horizontal support bar on large transducers


Due to its physical size, the ES38B transducer must be fitted with a horizontal support bar. The purpose of this support bar is to protect the transducer from damage in the event of slamming. This happens if the vessel hull climbs out of the water in heavy seas. The force of the water when the hull falls down may push the transducer up and cause damage to its mounting. The support bar can be secured to the mounting ring using threaded rods. See *Support bar [206574]* on page 39. [2]

Example: Box keel installation

The figure below illustrates a symmetrical box keel installation.

Figure 6 Box keel installation

- A Box keel
- B U-shaped support bar (only recommended on large transducers)
- C Stuffing tube
- D Cable in steel conduit
- E Cable service loop

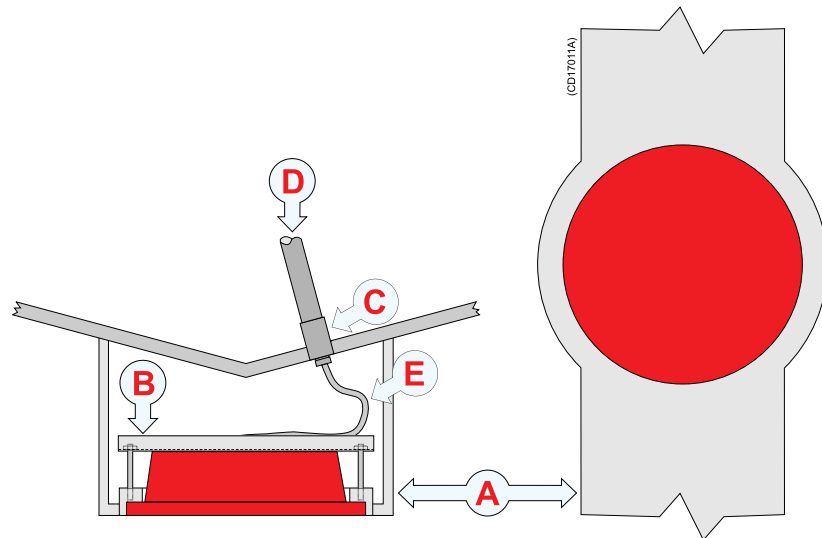

Transducer flush mounted in a steel tank

Flush mounting is used on very large vessels with a hull so deep that no air bubbles are found below the hull, and on vessels operating in shallow harbours or waters, where a protruding blister can not be accepted.

2. Slamming is the impact of the bottom structure of a ship onto the sea surface. It is mainly observed while sailing in waves, when the bow raises from the water and subsequently impacts on it. Slamming induces extremely high loads to ship structures and is taken under consideration when designing ships. (Wikipedia)

The standard procedure for flush mounting on a steel vessel is to weld a steel tank inside the hull, and mount the transducer into this tank.

Use the mounting ring

Large circular transducers are designed to be mounted using a mounting ring. A suitable mounting can be provided by Simrad, drawings are also available for local production. The mounting ring is welded to the hole prepared for the transducer. Bolts through the transducer body into the mounting ring will secure the transducer in place. Note that several transducers use direction guides to allow correct mounting.

Smooth surface is important

Mounting screws or bolts must not be extruding from the transducer or the area immediately around it. Make sure that the surface of the transducer face, the installation hardware used to mount it, the hull plating and the putty around the transducer is as even and smooth as possible. Obstructions on these surfaces will create problems with turbulent flow.

Use a horizontal support bar on large transducers

Due to its physical size, the ES38B transducer must be fitted with a horizontal support bar. The purpose of this support bar is to protect the transducer from damage in the event of slamming. This happens if the vessel hull climbs out of the water in heavy seas. The force of the water when the hull falls down may push the transducer up and cause damage to its mounting. The support bar can be secured to the mounting ring using threaded rods. See *Support bar [206574]* on page 39. ^[3]

Water filled

As for a blister, the interior of the tank must be filled with water.

This can be accomplished by air release through a steel tube, which is extended either to open air 1.5 m above the water line or to the water outside the hull at a point higher than the tank interior.

If the tube is extended to open air, drainage must be provided with leakage at the transducer flange or a separate hole in the tank bottom.


3. Slamming is the impact of the bottom structure of a ship onto the sea surface. It is mainly observed while sailing in waves, when the bow raises from the water and subsequently impacts on it. Slamming induces extremely high loads to ship structures and is taken under consideration when designing ships. (Wikipedia)

Example: Flush mounting in a steel tank

Transducer mounting in a steel tank is shown in the figure below.

Figure 7 Flush mounting in a steel tank

- A Steel tank
- B Water
- C Drainage hole
- D Cable service loop
- E Steel tube for air outlet
- F Stuffing tube
- G Cable in steel conduit

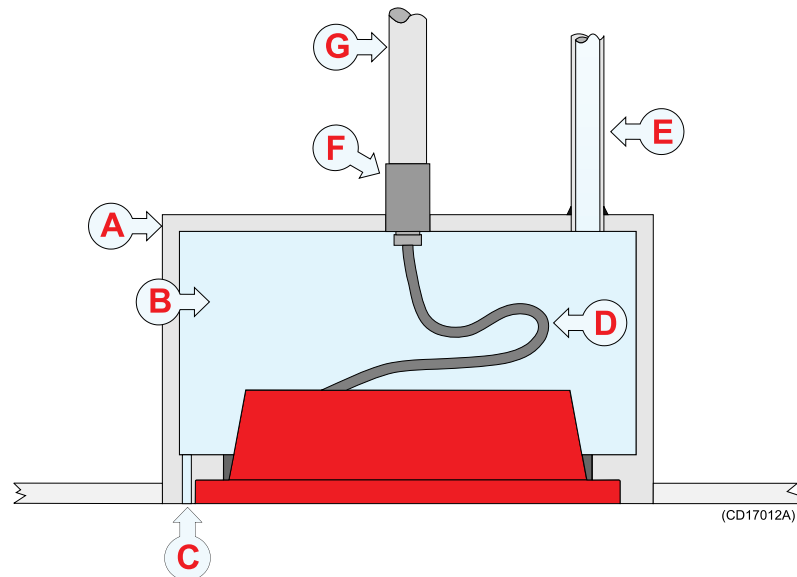

Transducer with acoustic window

Vessels operating in arctic waters need special attention on transducer installation. Floating blocks of ice may damage even a flush mounted transducer face. For this situation Simrad offers arctic tanks in different sizes.

Use the mounting ring

Large circular transducers are designed to be mounted using a mounting ring. A suitable mounting can be provided by Simrad, drawings are also available for local production. The mounting ring is welded to the hole prepared for the transducer. Bolts through the transducer body into the mounting ring will secure the transducer in place. Note that several transducers use direction guides to allow correct mounting.

Smooth surface is important


Mounting screws or bolts must not be extruding from the transducer or the area immediately around it. Make sure that the surface of the transducer face, the installation hardware used to mount it, the hull plating and the putty around the transducer is as even and smooth as possible. Obstructions on these surfaces will create problems with turbulent flow.

Example: Acoustic window

The transducer shown in the figure below is mounted inside the tank behind a strong acoustic window which could be made of polycarbonate.

The tank is filled with oil.

Figure 8 Acoustic window

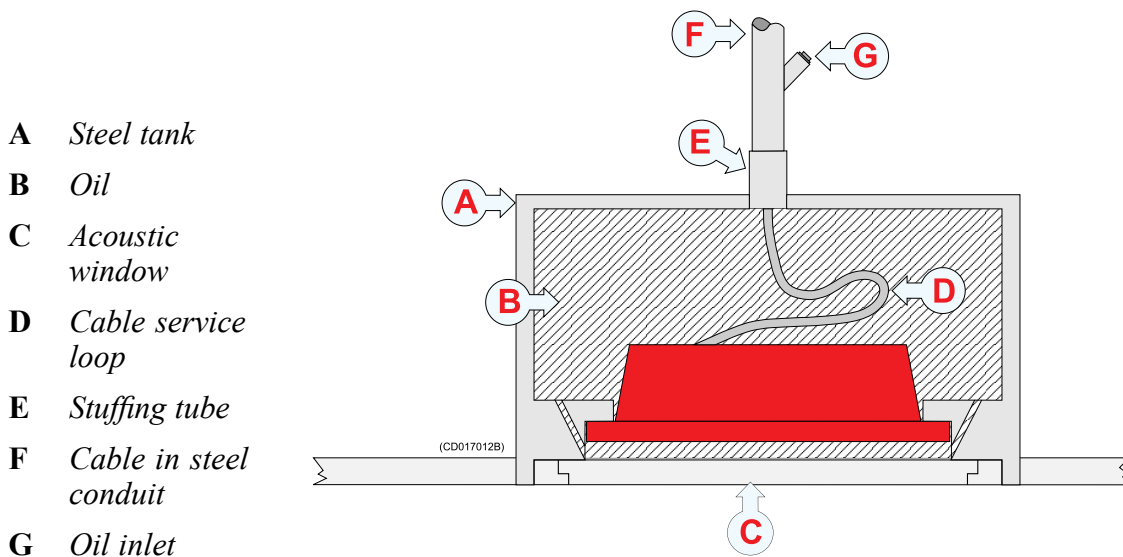

- A Steel tank
- B Oil
- C Acoustic window
- D Cable service loop
- E Stuffing tube
- F Cable in steel conduit
- G Oil inlet

Transducer mounted inside the hull

The transducer can also be mounted inside the hull.

An installation of the transducer inside the hull, and sounding through the hull, requires a good acoustic contact between the transducer face and the hull. Build a tank around the transducer and fill it with a liquid. Oil used in hydraulic systems is a well suited liquid for this purpose. It contains no gas bubbles and is non-corrosive.

Typical values of the two way loss are 3 dB for polyester, 6 dB for aluminium and 10 dB for steel. Hulls made of wood or a sandwich type with foam in the middle, attenuate the sound so much that through hull sounding must be regarded as impossible. The loss varies with the distance between transducer face and the hull. The best result is obtained when the distance is half a wavelength. Consult Simrad for advice. In addition to the loss, the beam pattern is degraded, because a larger area of the hull is set into vibrations.

Use the mounting ring

Large circular transducers are designed to be mounted using a mounting ring. A suitable mounting can be provided by Simrad, drawings are also available for local production. The mounting ring is welded to the hole prepared for the transducer. Bolts through the transducer body into the mounting ring will secure the transducer in place. Note that several transducers use direction guides to allow correct mounting.

Smooth surface is important


Mounting screws or bolts must not be extruding from the transducer or the area immediately around it. Make sure that the surface of the transducer face, the installation hardware used to mount it, the hull plating and the putty around the transducer is as even and smooth as possible. Obstructions on these surfaces will create problems with turbulent flow.

Example: Mounting inside the hull

The transducer shown in the figure below is mounted inside the hull. The tank is filled with oil.

Figure 9 Mounting inside the hull


- A Steel tank
- B Oil
- C Hull plating
- D Cable service loop
- E Stuffing tube
- F Cable in steel conduit
- G Hole for oil filling
- H Air outlet

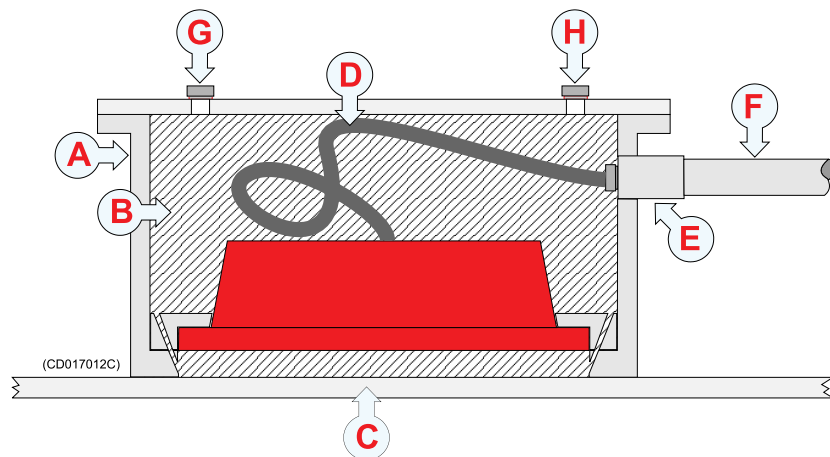

Transducer mounted on a drop keel

The use of a drop keel with the purpose of stabilising the vessel is well known.

A drop keel is also a superior platform for echo sounder transducers. Such instrument keels have been built, mainly on research vessels, often protruding as far as three meters below the hull. At that depth, the water is free of air bubbles up to very high sea states. The vessel is then able to perform reliable acoustic measurements in open sea a larger part of the year.

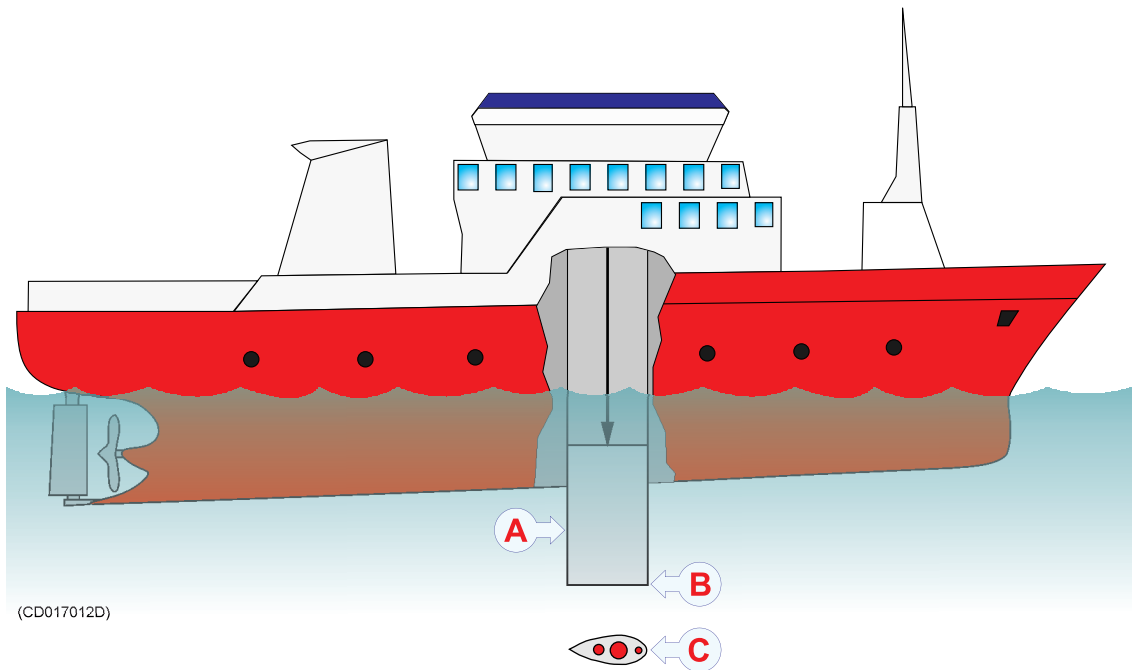


- A** *Instrument keel shaft*
- B** *Lowered position*
- C** *Bottom view*

Retractable transducer

Hull units allowing the transducer to be lowered and hoisted are commonly used for horizontal looking sonars. When not in use, the transducer is retracted into a trunk.

The retractable hull unit is more expensive than a blister, but on vessels with a hull where it is difficult or impossible to install a blister, it may still be worth while. The principles of a hull unit with a retractable transducer is shown below.

Vessels without a keel and with a wide, flat bottom is an example where a retractable hull unit can be the only acceptable method for bringing the echo sounder transducer below the boundary layer.

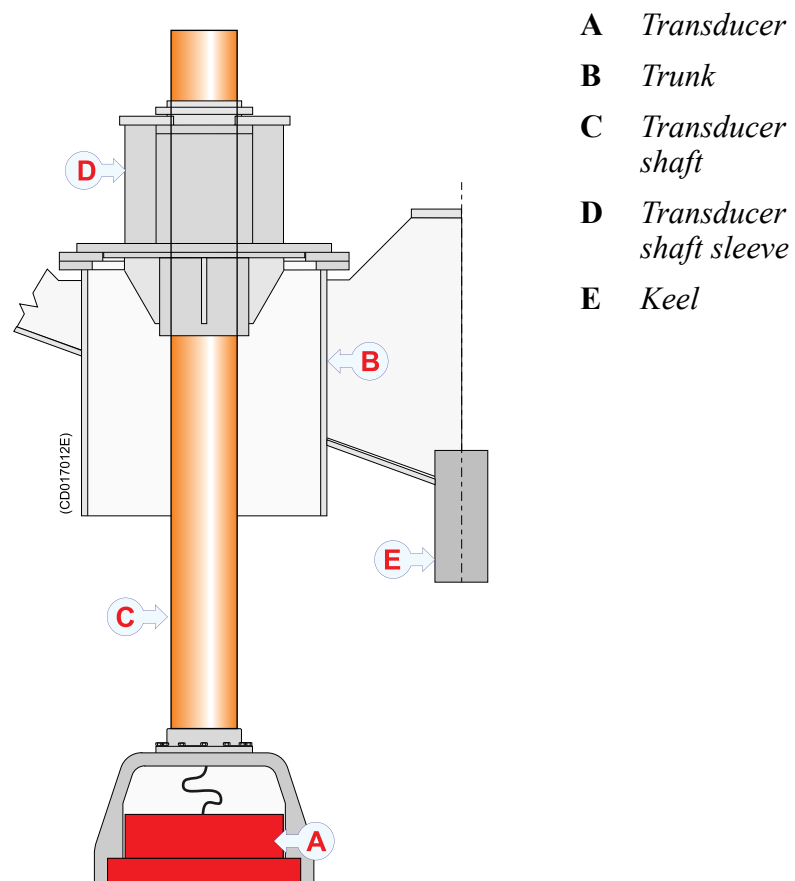

STEEL CONDUIT

Why use steel conduits?

It is strongly recommended to lay a steel conduit from the transducer's cable gland to the echo sounder transceiver, and to pull the transducer cable through this conduit. There are several reasons for this.

- It will make it easier at a later stage to replace the transducer.
- Noise and interference from other electrical equipment is greatly reduced.
- The risk of flooding is greatly reduced if the pipe is terminate above the water line.

With a steel conduit the installation will satisfy the EU regulations for EMC interference. Without a steel conduit, there is a risk of reduced echo sounder performance.

Steel conduits qualities and shielding

The steel conduit must be unbroken and watertight from the transducer to above the water line. From there, the cable can be pulled further, or a junction box can be installed to facilitate further connections. Note that the steel conduit must act as a continuous electrical screen all the way.

Steel conduit dimensions:

- minimum 35 mm inner diameter
- minimum 6 mm wall thickness (4.5 mm if galvanised)

More than one transducer cable?

If two or more transducers are installed close to each other it is possible to pull their cables in the same steel conduit, provided the conduit diameter is increased accordingly. However, for easy replacement it is recommended that each transducer has its own steel conduit.

TRANSDUCER HANDLING AND MAINTENANCE

You **MUST** observe the following rules for handling, maintenance and painting.

Rules for transducer handling

Note _____

Do not lift the transducer by the cable.

Do not expose the transducer to direct sunlight.

Do not expose the transducer to excessive heat.

Transport protection

Some transducers are delivered with a cover plate on the face for protection during transport. Let this plate stay on as long as possible, but do not forget to remove it before the vessel goes into the sea.

Painting the transducer face

An anti-fouling paint may be applied to the transducer face. Because some paint types may be aggressive to the polyurethane in the transducer face, please consult Simrad's list of approved paints. See *Approved anti-fouling paints* on page 24.

Cleaning the transducer face

Whenever opportunity arise, for example when the vessel is dry docked, the transducer face may be cleaned for shells and other marine fouling. Be careful not to make cuts in the transducer face. Use a piece of soft wood or a very fine grade emery paper.

Special rules for acoustic windows

Arctic tanks have acoustic windows made of polycarbonate. These must neither be painted nor cleaned with chemicals. Acoustic windows must not be exposed to direct sunlight.

Approved anti-fouling paints

This is Simrad's list of approved antifouling paints on polyurethane transducer housing.

Jotun

Head office address: P.O.Box 2021, N-3248 Sandefjord, Norway

Website: www.jotun.com.

- 1 Racing
- 2 Non-stop
- 3 Safeguard Universal primer (125 micron) with Antifouling SeaQuantum Ultra (125 micron)
- 4 Antifouling Seaguardian

International Marine Coatings

Address: World-wide offices

Website: www.international-marine.com.

- 1 Intersleek tie coat + 425 FCS
 - BXA386/BXA390/BXA391 Grey
 - HKA563/HKA570/HKA571 Yellow
 - Mix BXA386, BXA390 and BXA391 first, then apply. When dry, mix HKA563, HKA570 and HKA571, apply.
- 2 Intersmooth 360 Ecoloflex SPC
- 3 Micron Extra

Hempel IFA Coatings

Head office address: Hempel A/S, Lundtoftevej 150, Kgs. Lyngby, DK-2800 Copenhagen, Denmark

Website: www.hempel.com.

- 1 Hempel A/F Classic 76550

Note _____

Refer to the manufacturer's documentation and data sheets for a complete procedure.


Using self-locking taps

Screw connections are generally made so that they can be loosened again. However, accidental loosening, especially under dynamic stress, must be avoided. For this reason it is often necessary to use additional locking devices. These are often expensive, they can be used once only, or react critically to temperature changes.

Introduction to Emuge self-locking threads

Emuge self-lock is a tap design with an integrated locking feature. Standard metric bolts are used. The internal thread provides a self-locking connection, which can be used repeatedly. It is not necessary to involve a secondary locking device (e.g. chemical, nylon or mechanical). The **Emuge self-lock** bolts withstand vibrations better than standard (metric) threads, because the thread contact stops the sideways movement. The special design of the internal thread profile also provides a more even distribution of the tightening stress over the whole thread length. The assembly is just as easy as with a normal (metric) thread. There is no general applicable standard (e.g. DIN standard) for the **Emuge self-lock** thread.

Figure 10 Example, internal and external threads

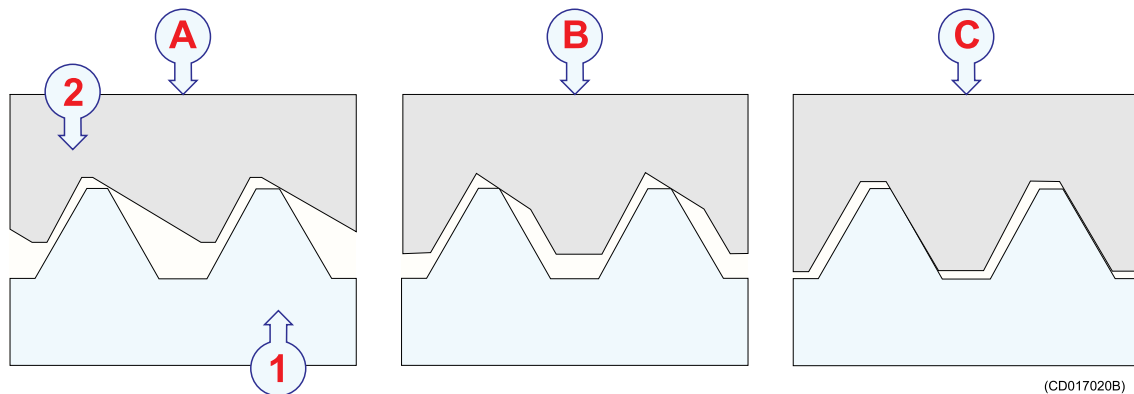

- A *Emuge's saw-tooth profile up to pitch $P \leq 0.7$ mm*
- B *Emuge's saw-tooth profile up to pitch $P \geq 0.7$ mm*
- C *Standard thread*
- 1 *External thread*
- 2 *Internal thread*

Advantages


- The thread locking feature is integrated in the internal thread
- Modified profile with ramp surface in the direction of stress
- 30 degree ramp surface provides self-locking effect
- Easy assembly
- No assembly errors (forgetting the locking device) possible
- Use of standard external threads (screws) with tolerance class "medium"
- Even distribution of stress over the whole thread length
- No stripping of threads

- Economically efficient locking system, no additional components are necessary
- Undiminished holding power even under dynamic stress
- Repeated loosening and re-tightening without loss of function
- Internal threads can be produced with **Emuge** taps, cold forming taps or thread mills
- Larger thread hole diameters, i.e. increased tool life for threading tools
- Larger tolerances for thread hole diameters

Drawing standard

Whenever self-locking threads are required, this is shown on the technical drawing. In the case of tapping through holes, the arrow at the end of the center line illustrates the screw-in direction of the bolt.

Figure 11 Drawing examples, self-locking thread

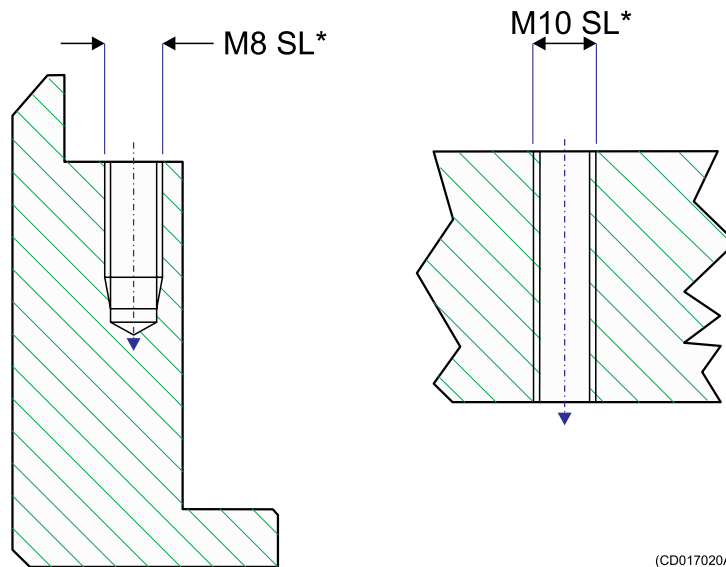


The drawing is normally provided with the following text (or similar):

Note: The self-lock threads marked with SL must be made in accordance with procedure 842–202125. Drill diameters for threads differ from standard. Self-lock taps can be supplied by Simrad.*

Taps and gauges

The pretension locking thread self-lock (taps) from manufacturer **Emuge** must be used.

Figure 12 Example of use

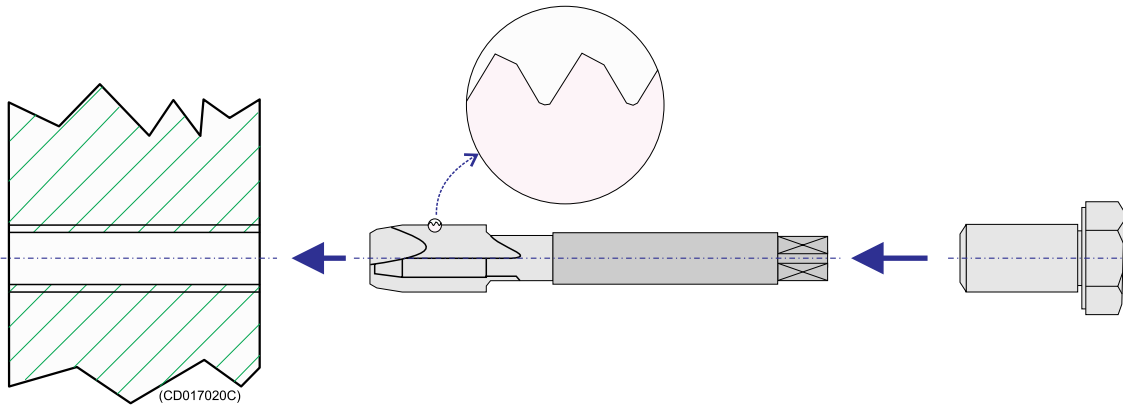

Note

*In the case of tapping through holes it is important that the profile of the **Emuge self-lock** threads is in the correct direction compared with the entering direction of the bolt.*

Use **Emuge self-lock** gauges. Note that the gauge must be used in the correct direction.

Self-lock taps provided by Simrad

The following self-lock taps are on stock at Simrad, and can be ordered from us.

Threads	Drill diameter for threads	Part.no
M6	ø5.2	700-078838
M8	ø7.0	700-078531
M10	ø8.8	700-078408
M12	ø10.7	700-078409
M16	ø14.5	700-078410

Supplier and manufacturer

Norwegian supplier is:

Tingstad AS, P.O.Box 83, Kalbakken, 0902 Oslo, Norway

<http://www.tingstad.no>

Manufacturer is:

EMUGE-Werk Richard Glimpel, Nurnberger Strasse 96-100, D-90607 Lauf, Germany

<http://www.emuge.de>

TRANSDUCER CABLE SPLICING

If you need to cut or lengthen the transducer cable, you must splice it correctly. The cable between the junction box and the transceiver must then be supplied by Simrad, and this must be the same type as used on the transducer(s). To splice the cable, use a metal junction box with EMC cable glands and a terminal block. The terminal block must provide solid fastening of the cable ends as well as sufficient insulation between the wires. We recommend that the cable screen is connected to the junction box chassis using the EMC cable glands, but if you do this, the junction box chassis must not be connected to vessel's ground.

Note

Do not solder the wires together with only electrical tape for insulation. This will result in electrical noise and reduced operational performance.

Do not connect the cable screen to the vessel's ground.

DRAWING FILE

This chapter contains relevant drawings related to the electrical and physical installation of the Simrad ES38B Split-beam transducer.

Note

The mechanical drawings are for information and guidance only. They are not in scale, and may differ slightly from the original drawings. All dimensions are in mm unless otherwise is noted.

The original installation drawings are available on PDF and/or DWG (AutoCad) format. Visit www.simrad.com to download.

Topics

- *Echo sounder connections* on page 29
- *Outline dimensions and installation drawings* on page 32

Echo sounder connections

Observe the following information related to electrical connection of the ES38B Split-beam transducer.

Splicing the transducer cable


If you need to splice the transducer cable, it is very important to use the correct cable, and to avoid ground loops. We strongly recommend the use of a junction box. We also recommend that you install the transducer cable in a steel conduit.

For more information, see:


- *Transducer cable splicing* on page 28
- *Steel conduit* on page 22
- *General Purpose Transceiver (GPT) transducer plug assembly* on page 31

General Purpose Transceiver (GPT) wiring

Observe the drawing below to connect the Simrad ES38B Split-beam transducer to the General Purpose Transceiver (GPT). For more information about these connections, refer to the applicable echo sounder installation manual.

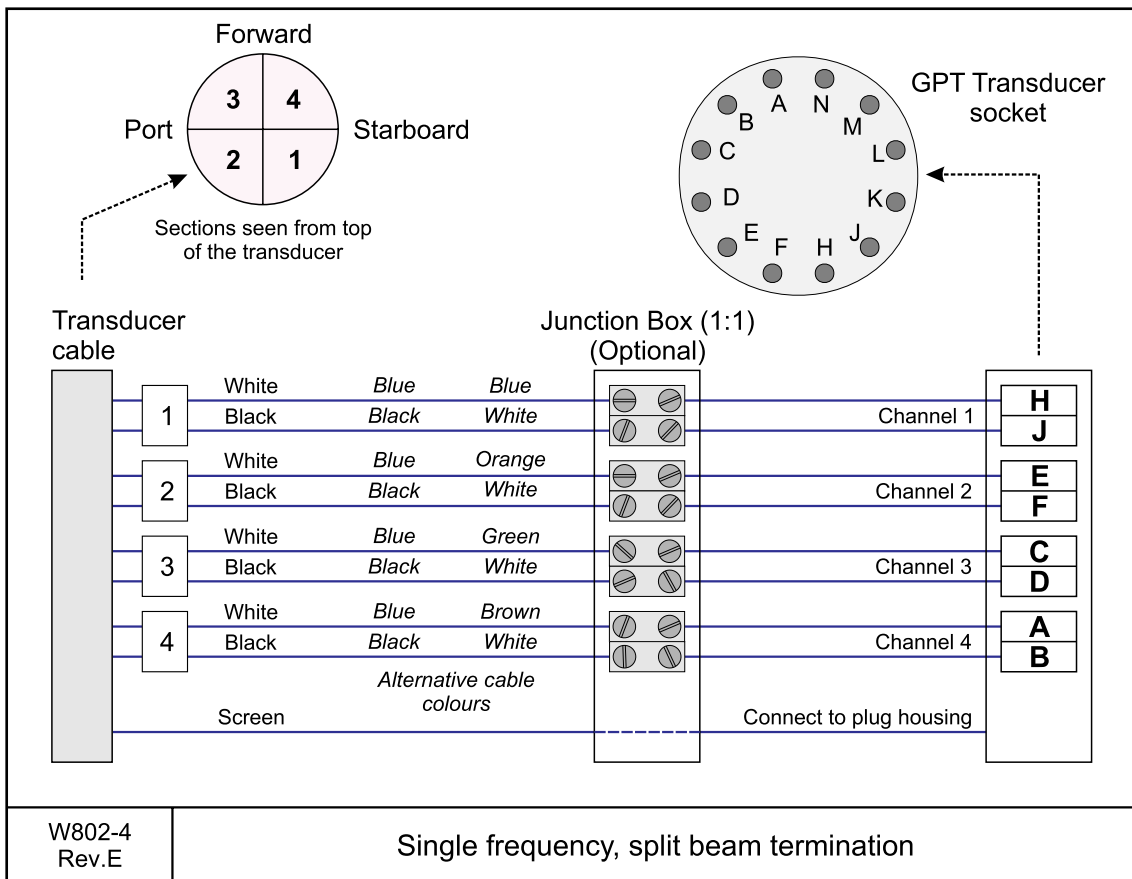

General Purpose Transceiver (GPT) transducer plug assembly

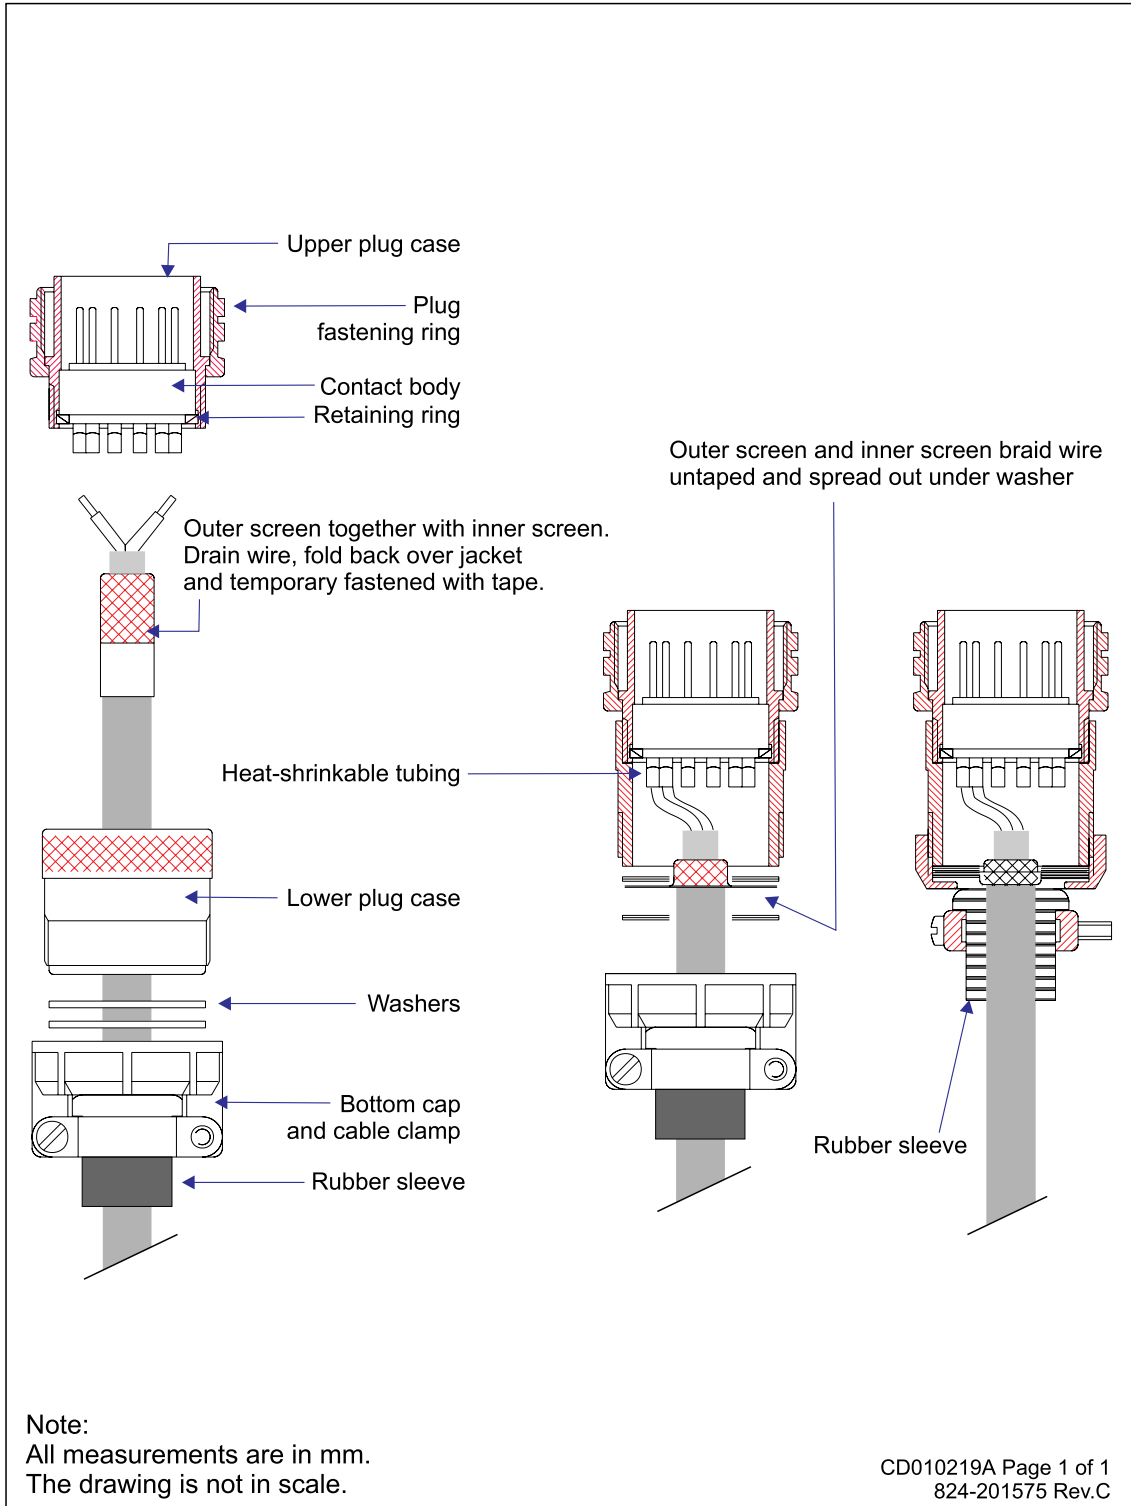

Outline dimensions and installation drawings

Note


When you fasten the transducer to the mounting ring, apply Loctite 270 on each bolt, and tighten the bolts several times. Use maximum torque 32 Nm.

In addition to the drawings available in this chapter, additional drawings are provided on our web site. See www.simrad.com.


Topics


- *Outline dimensions [074647] on page 33*
- *Mounting ring [074076] on page 34*
- *Recommended arrangement [074544] on page 36*
- *Mounting procedure [088759] on page 38*
- *Support bar [206574] on page 39*

Outline dimensions [074647]

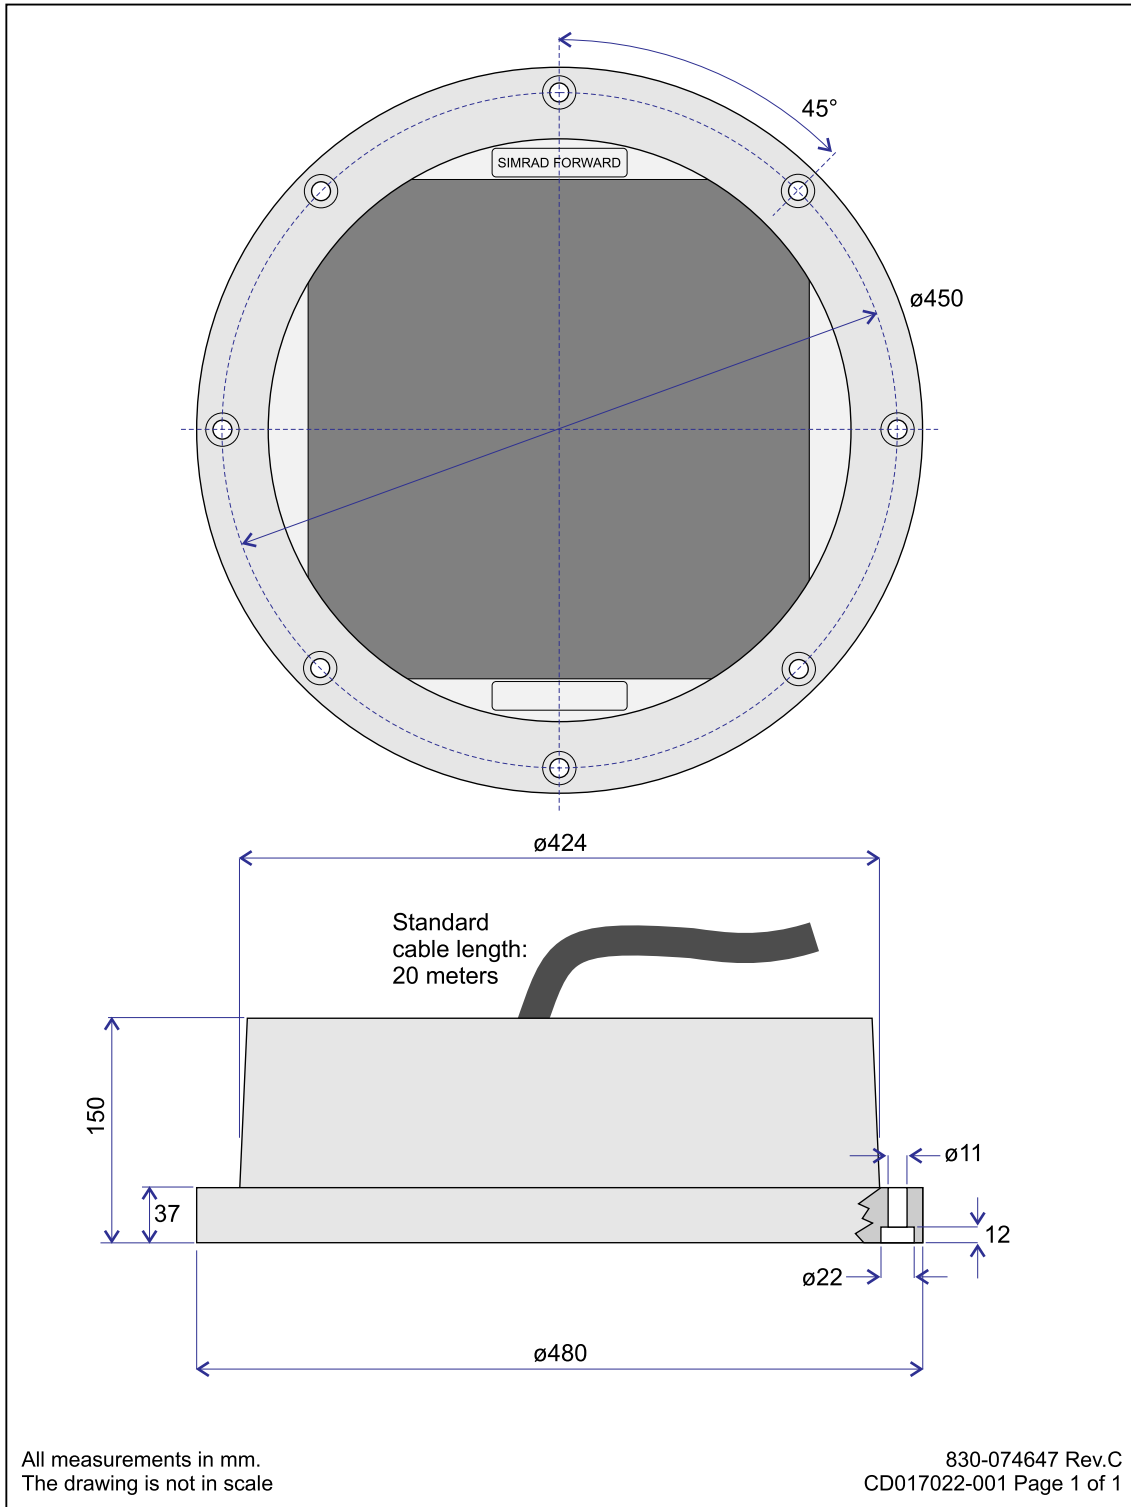



Mounting ring [074076]

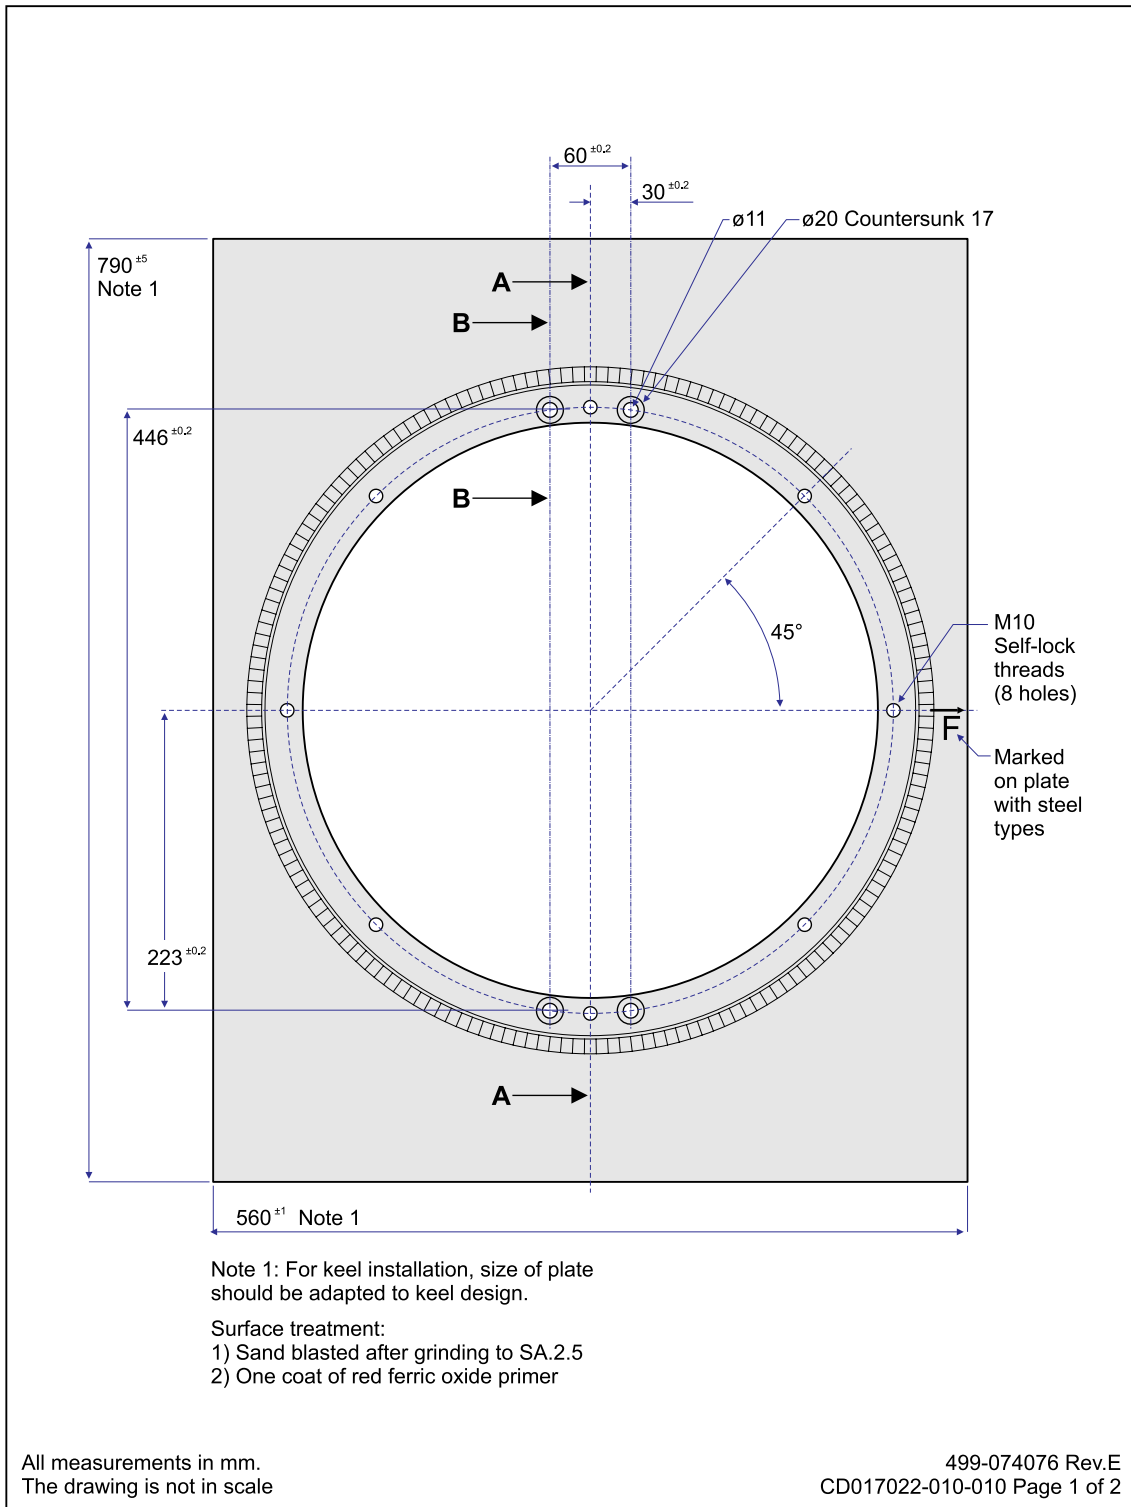

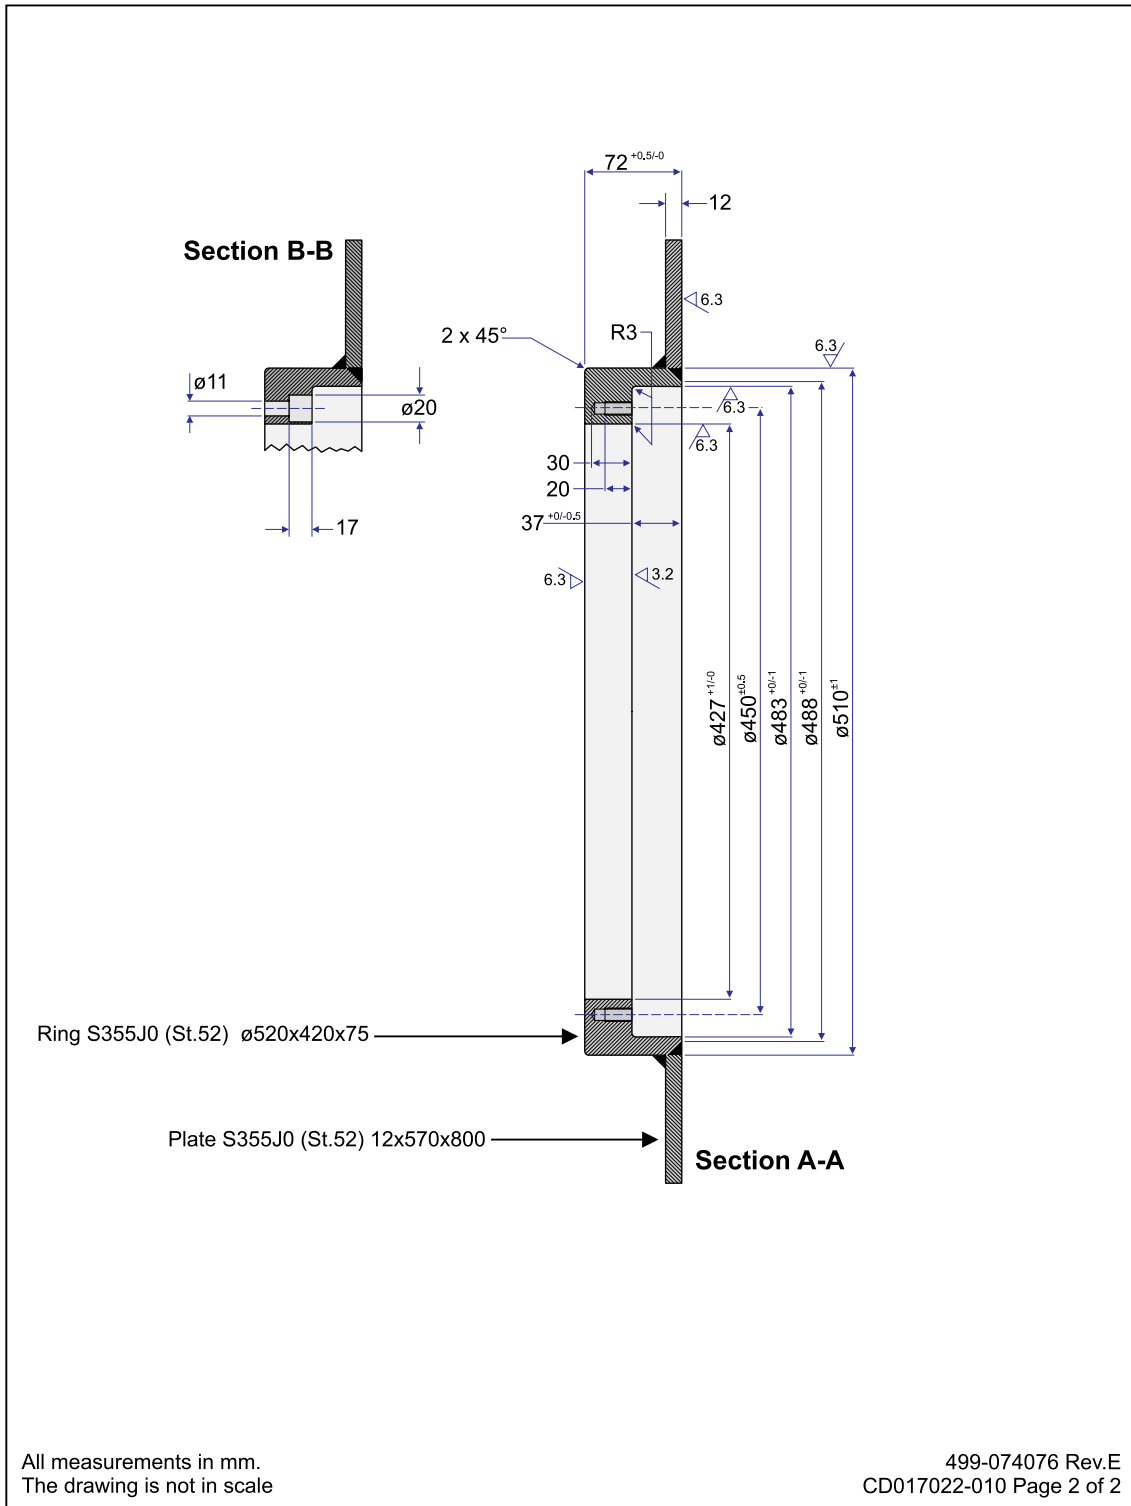


Recommended arrangement [074544]

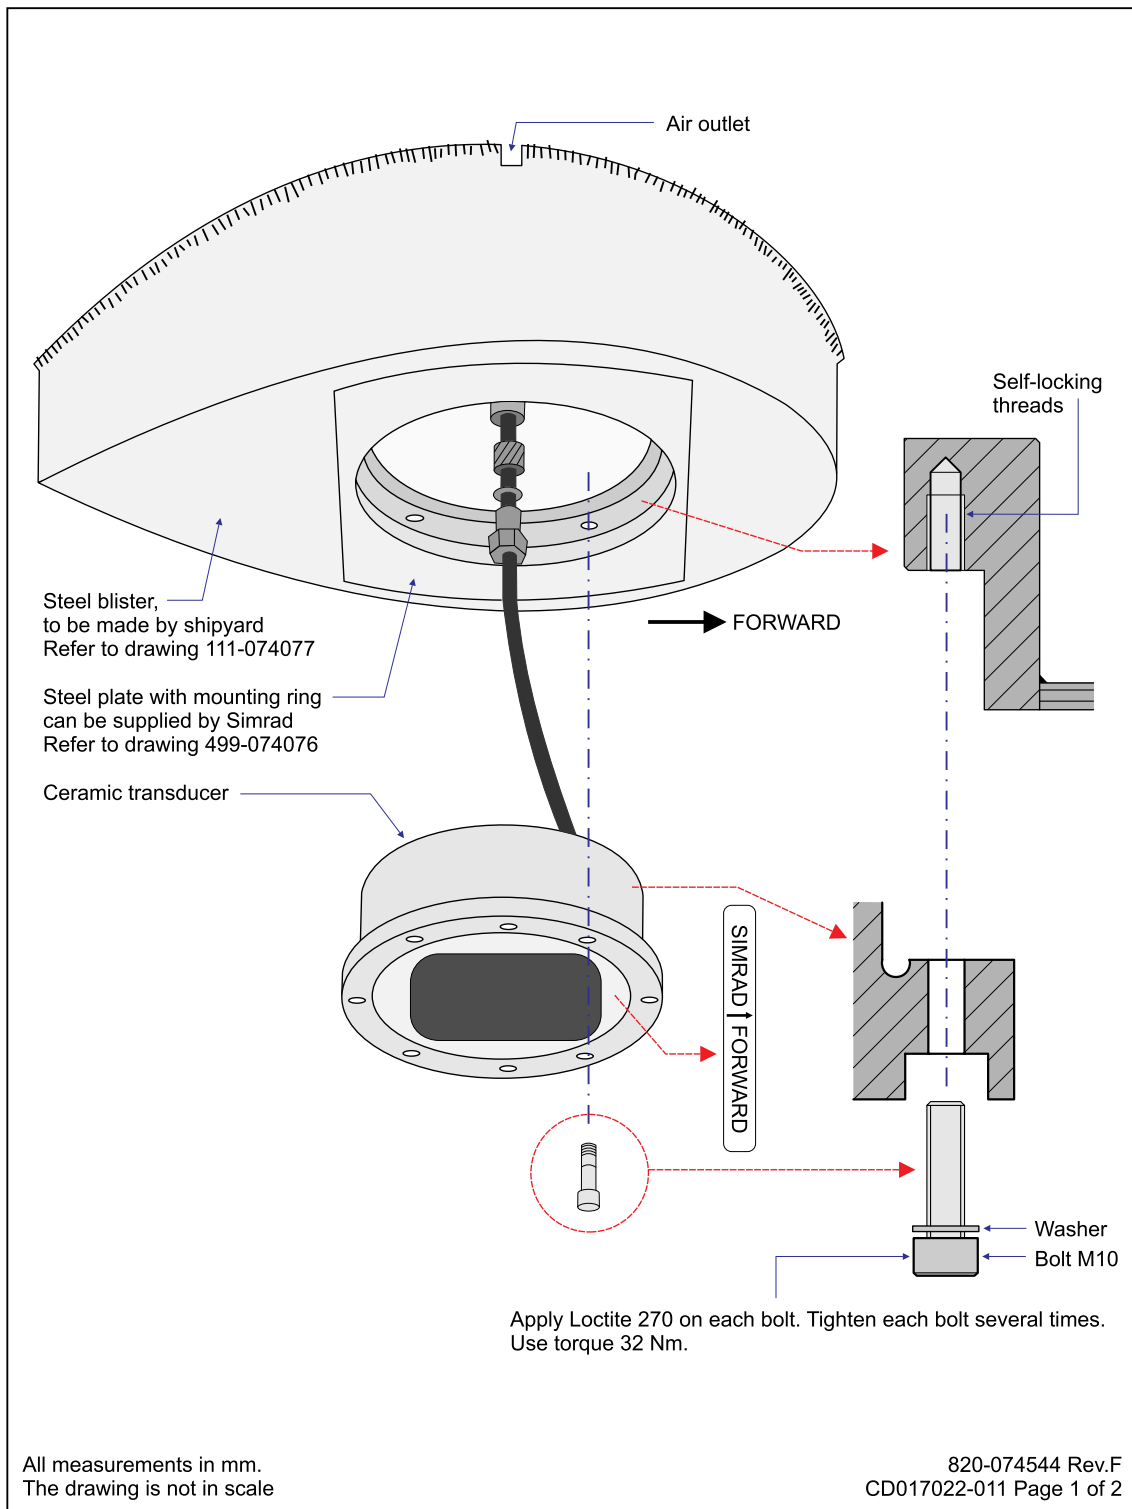


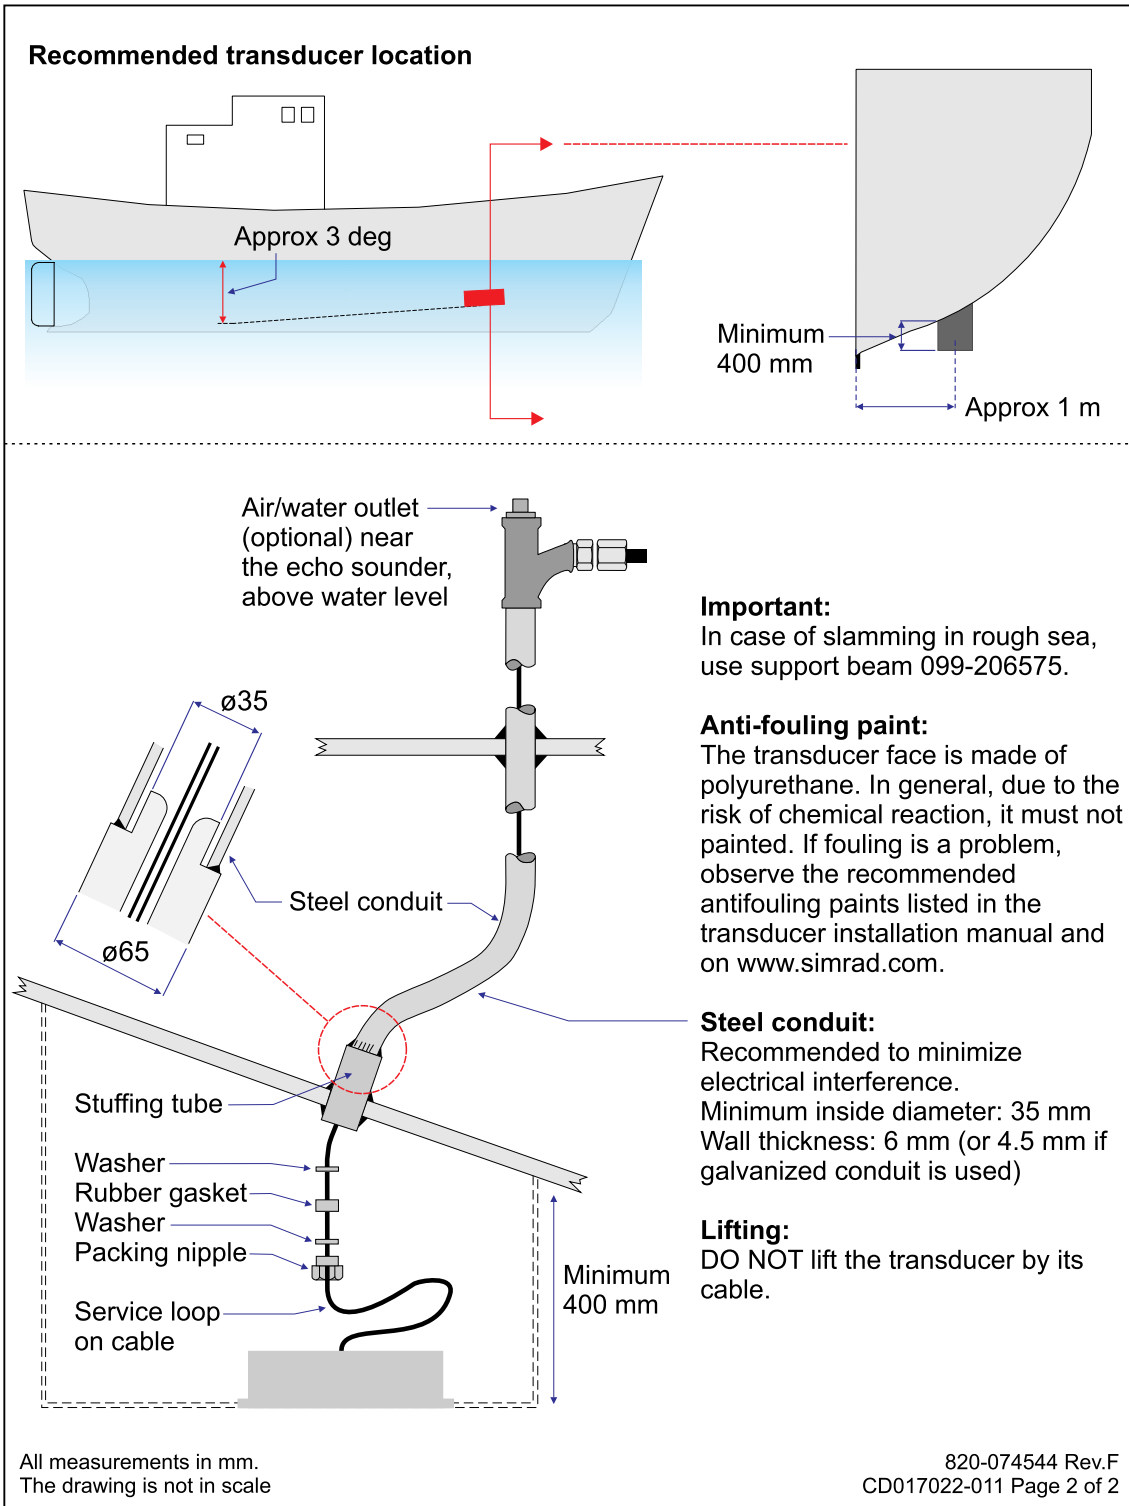


Mounting procedure [088759]

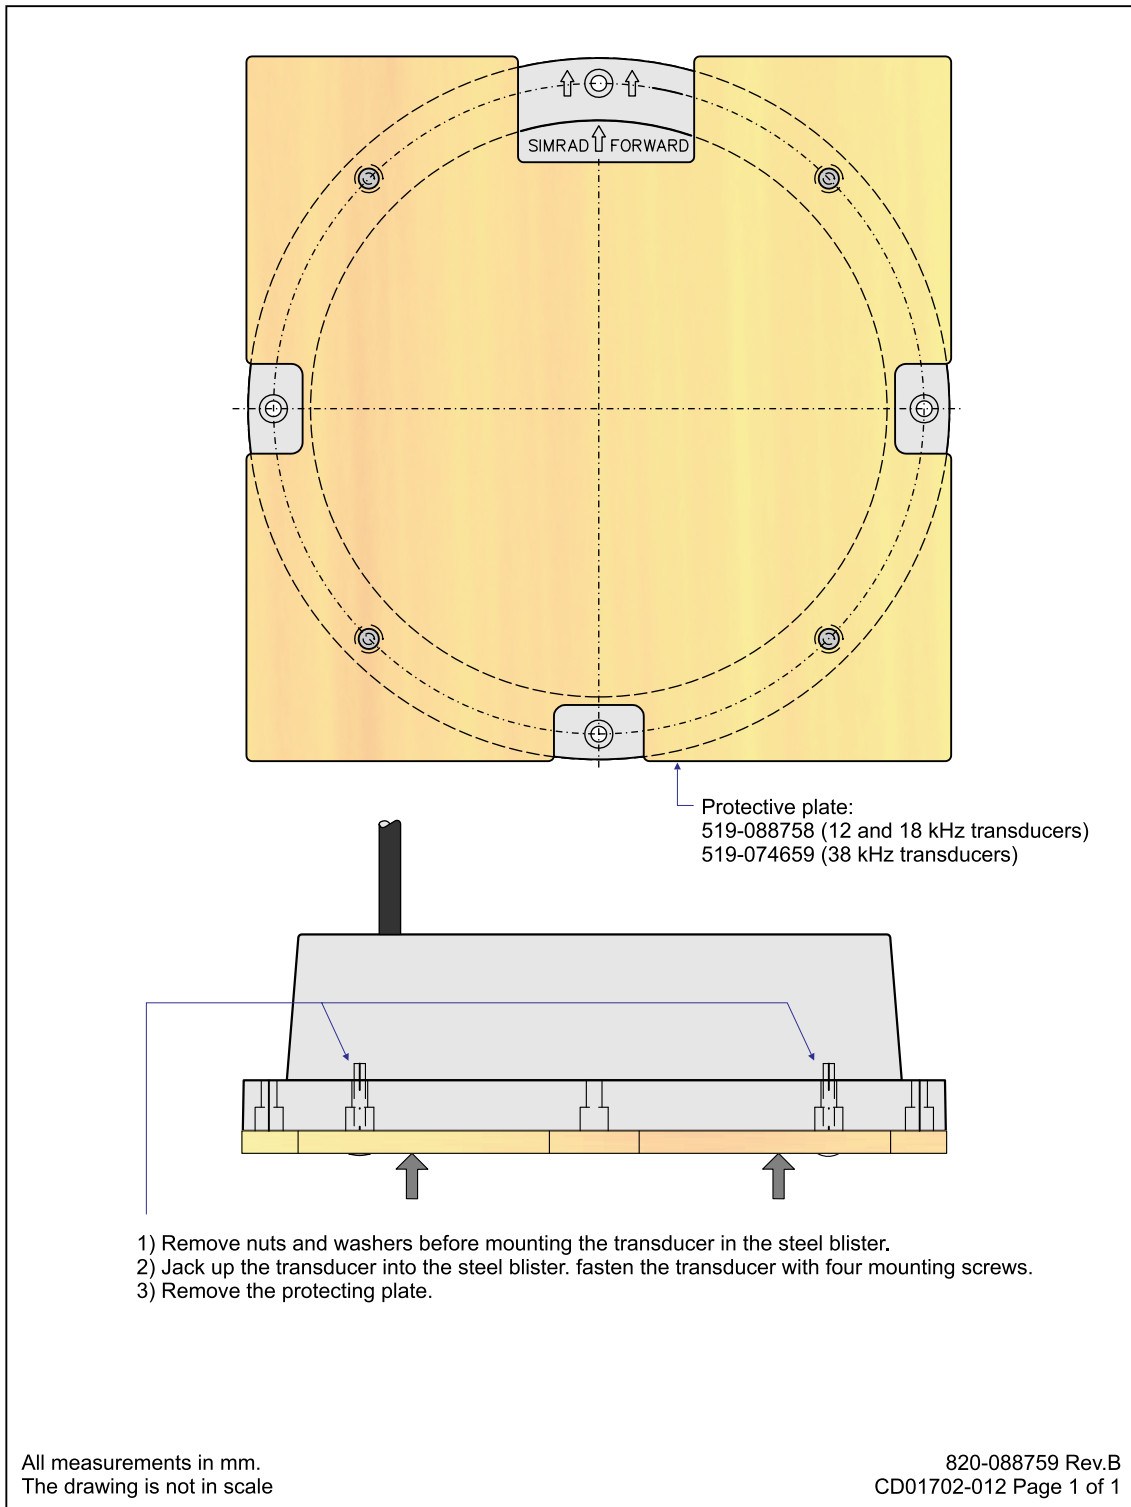

Support bar [206574]

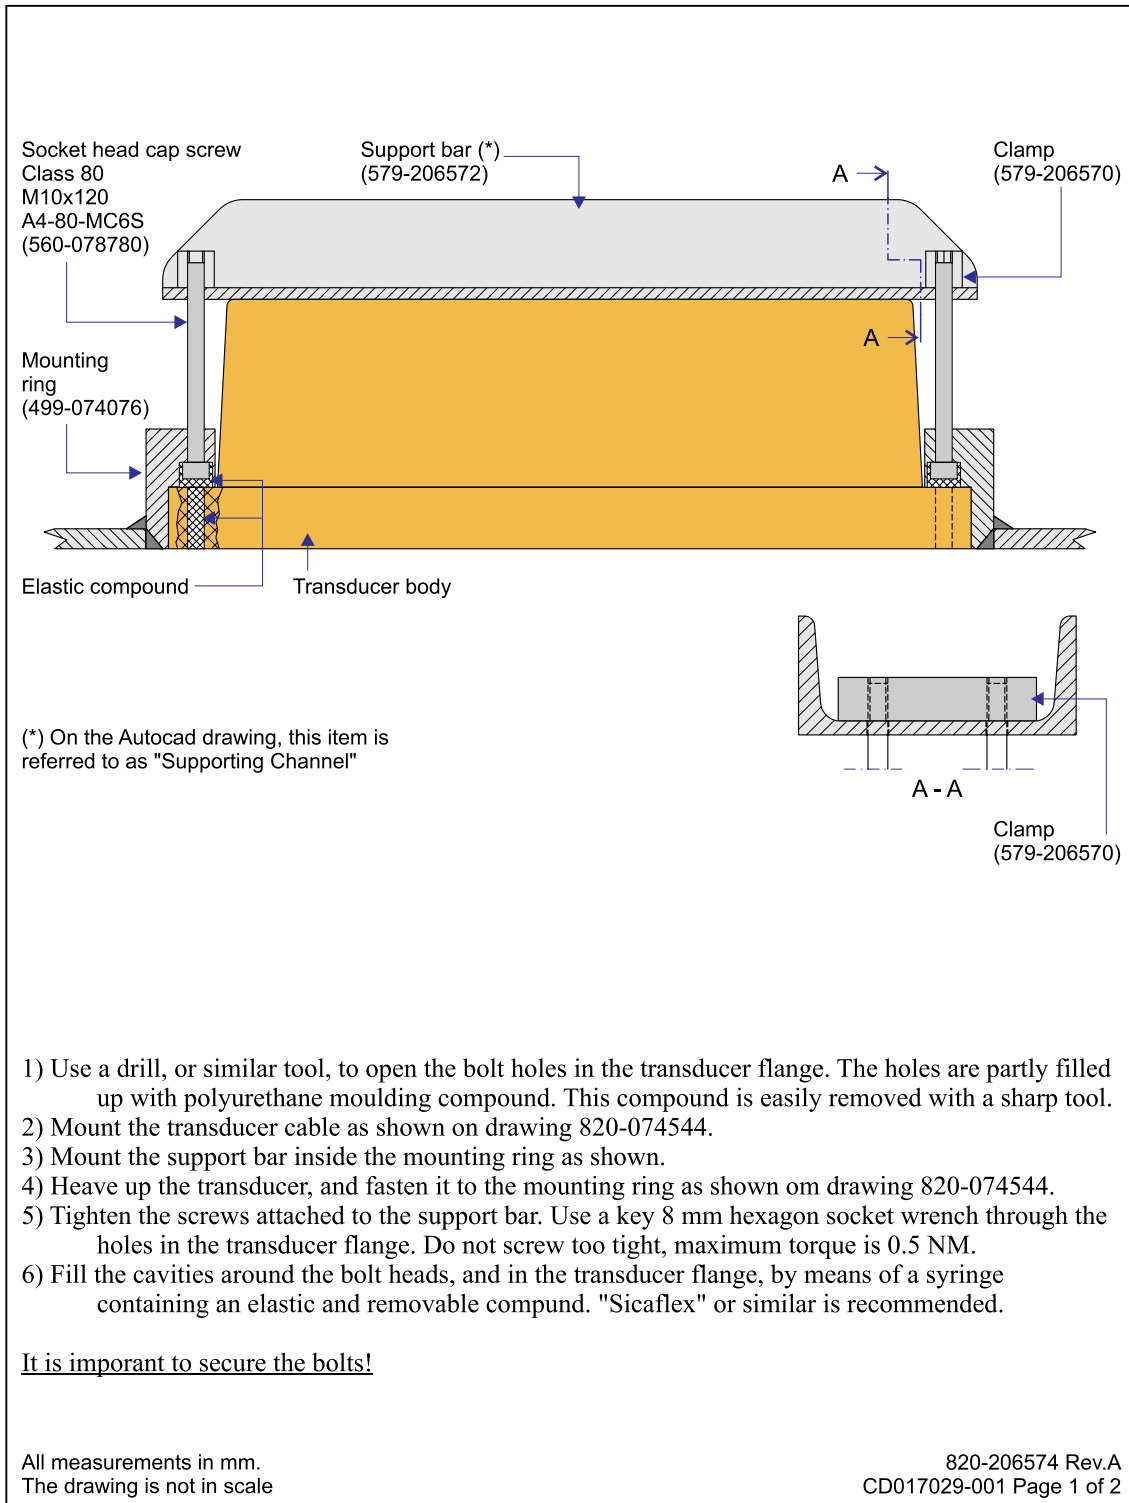

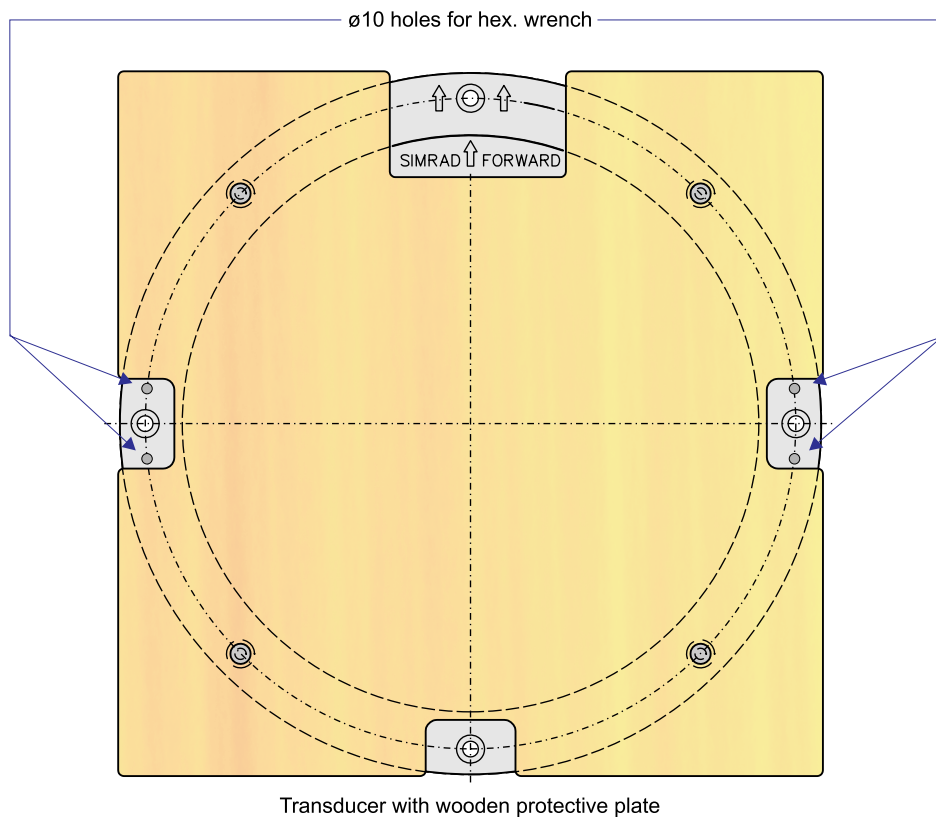

All measurements in mm.
The drawing is not in scale

820-206574 Rev.A
CD017029-001 Page 2 of 2

Index

A

- About, 5
 - information in this manual, 5
- Acoustic window, 23
 - example, 18
 - installation, 17
- Additional information, 5
- Air outlet
 - example, 12
- Anti-fouling
 - paint, 24
- Approval
 - maritime authorities, 5
- Arrangement
 - drawing, 36

B

- Blister
 - Common guidelines, 12
 - installation, 11
 - physical location, 13
- Boundary water layer, 8
- Bow thrusters
 - noise, 9
- Box keel
 - example, 15
 - installation, 14

C

- Cable
 - transducer, splicing, 28
- Clamping ring
 - blister, 11
 - drawing, 38
 - example, 12
- Clamping rings, 11, 14, 16–17, 19
- Cleaning
 - transducer face, 23
- Common guidelines
 - blister, 12
- Conduit
 - steel, 22

D

- Diameter
 - steel conduit, 22
- Dimensions
 - drawing, 33
- Drawing
 - arrangement, 36

- Clamping ring, 38
- GPT Transducer plug, 31
 - mounting arrangement, 36
- Mounting ring, 34
 - outline dimensions, 33
- Support bar, 39
- Drawing file, 29
- Drop keel
 - installation, 20

E

- EMC interference, 22
- Emuge, 25
- Example
 - Acoustic window, 18
 - Air outlet, 12
 - box keel, 15
 - Clamping ring, 12
 - flush mounting, 17
 - Inside the hull, 19
 - Mounting ring, 12
 - Streamlined blister, 12

F

- Flush mounting
 - example, 17
 - steel tank, 15

G

- General Purpose
 - Transceiver
 - transducer plug, 31
 - wiring, 30
- GPT
 - wiring, 30
- GPT Transducer plug
 - drawing, 31
- Ground loops
 - avoiding, 29

H

- Handling, 23
- Handling rules, 23
- Heat, excessive
 - do NOT expose, 23
- Hempel IFA Coatings, 24
- Hull unit
 - installation, 21

I

- Inclination

- angle, 9
- Inside the hull
 - example, 19
 - installation, 18
- Installation
 - drawings, 6, 29
 - hardware, 6
 - responsibility, 6
- Installation method
 - Acoustic window, 17
 - Blister, 11
 - Box keel, 14
 - Drop keel, 20
 - Flush mounting, 15
 - Hull unit, 21
 - Inside the hull, 18
 - Retractable, 21
 - Steel tank, 15
- International Marine
 - Coatings, 24
- Introduction, 6

J

- Jotun, 24
- Junction box
 - cable splicing, 29

L

- Lifting, 23
- Location
 - recommendation, 10

M

- Maintenance, 23
- Maritime authorities
 - approval, 5
- Mounting arrangement
 - drawing, 36
- Mounting ring
 - blister, 11
 - drawing, 34
 - example, 12
- Mounting rings, 11, 14, 16–17, 19

N

- Noise
 - boundary water layers, 8
 - bow thrusters, 9
 - propeller, 9
 - protruding objects, 7

O

- Order number
transducer, 6
- Outline dimensions
drawing, 33

P

- Paint
anti-fouling, 24
- Painting
transducer face, 23
- Physical dimensions
drawing, 33
- Physical location
blister, 13
- Propeller
noise, 9
- Protruding objects, 7
- Purpose
this manual, 5

R

- Retractable
installation, 21

S

- Self-locking taps, 25
- Shielding
steel conduit, 22
- Simrad website, 5
- Smooth surface, 11, 14,
16–17, 19
- Splicing
transducer cable, 28–29
- Steel conduit
diameter, 22
qualities, 22
shielding, 22
why, 22
- Steel tank
flush mounting, 15
water filled, 16
- Streamlined blister
example, 12
- Sunlight
do NOT expose, 23
- Support bar, 11, 15–16
drawing, 39
- Surface
smooth, 11, 14, 16–17, 19

T

- Taps, self-locking, 25

Termination

- GPT, 30
- Toe-in, 13
- Transducer
lifting, 23
order number, 6
recommended location, 10
- Transducer cable
splicing, 28–29
termination, 30
- Transducer face
cleaning, 23
painting, 23
- Transducer plug
drawing, 31
- Transport protection, 23

W

- Water filled
steel tank, 16
- Wiring
General Purpose
Transceiver, 30

Simrad document number: 338462 / Version B

ISBN-13: 978-82-8066-107-4

©2009 Kongsberg Maritime AS

Simrad

Kongsberg Maritime AS
Strandpromenaden 50
P.O.Box 111
N-3191 Horten, Norway

Telephone: +47 33 03 40 00
Telefax: +47 33 04 29 87
www.simrad.com
contact@simrad.com

SIMRAD